



INSTALLATION INSTRUCTION AIR TO AIR



Sommario

1	Introduction.....	4
1.1	General Notes.....	4
1.2	Suggested tools.....	4
1.3	Series description	4
2	Read Carefully before use	5
2.1	Important information	5
2.2	Important information regarding the refrigerant used.....	5
2.3	Proper use	5
2.4	Regulatory	5
2.5	Energetic saving	6
3	Expected use of the heat pump.....	6
3.1	Operating area e safe devices.....	6
3.2	Heat pump structure.....	6
3.3	Operation mode.....	6
4	Equipment supplied	6
4.1	Main unit.....	6
4.2	Name and serial number.....	6
4.3	KITA AIR/AIR Cold Templari® external unit components diagram.....	8
4.4	KITA AIR PLUS Templari® external unit components diagram	9
4.5	KITA AIR/AIR Cold/AIR Plus Templari® internal unit components diagram	10
5	Transport	11
6	Mounting and installation.....	11
6.1	Equipment check	11
6.2	External unit measurements	11
6.3	Free spaces for the assembly	9
6.4	Choice of installation place	12
6.5	External unit mounting	12
6.6	Condensate discharge preparation.....	12
6.7	Correct alignment	14
7	Montaggio e installazione dell'unità interna	14
7.1	Internal unit sizes and components.....	11
7.2	Generalities and choice of the installation place	14
7.3	Assembly internal unit and correct positioning of B2 probe	15
8	Refrigerant circuit onnection.....	15
8.1	Installation requirements.....	15
8.2	Preparation for installation and refrigerant pipelines installation	15
8.3	Vacuum procedure.....	15
9	Maintenance and cleaning	16
9.1	Finned coil cleaning	16
9.2	Condensate discharge cleaning	16
9.3	Refrigerant circuit maintenance	16
10	Electric connection.....	16
10.1	General information.....	16
10.1.1	The customer/ installer has to:.....	17
10.2	Operations of laying.....	17
10.3	External unit connection	17
10.4	Internal unit connection.....	17

10.5	Probes and remote controller	17
10.6	Power supplying	18
10.6.1	Internal unit auxiliary heater (optional)	18
10.7	Power and signal cables characteristics	19
11	Terminal box wiring	20
11.1	Internal terminal box wiring.....	20
11.2	External unit internal terminal box wiring KITA - AIR.....	16
11.3	pLAN web wiring - "multi-KITA"	18
12	Electronics (UPC).....	22
12.1	Digital outputs	22
12.2	Digital inputs	22
12.3	Analogical outputs	22
12.4	Analogical inputs	22
12.5	Electric diagram KITA AIR	23
12.6	KITA AIR PLUS electric diagram.....	24
12.7	Internal unit wiring connection	25
12.7.1	Fan.....	25
12.7.2	4-way valve and carter resistance wiring	25
12.7.3	wiring probe	25
12.8	KITA AIR and AIR COLD internal unit auxiliary heating element (optional) wiring connection diagram	26
12.9	KITA AIR PLUS internal unit auxiliary heating element (optional) wiring connection diagram.....	27
13	Commissioning	28
13.1	Preliminary controls.....	28
13.2	Commissioning	28
14	K-Touch Panel	28
14.1	Warnings	28
14.2	Notes on the plant preparation for K-Touch panel	29
14.3	Connecting to the Kita heat pump	29
14.4	System overview.....	30
14.5	Exploded view: PPlan connection (7a) or BMS connection (7b).....	32
15	Control unit	34
15.1	Fixing of the panel	34
15.2	Control panel measurement.....	34
15.3	Control panel structure	34
15.4	Control panel display	34
15.5	Main menu	35
15.6	ON-OFF menu	35
15.7	SETPOINT menu.....	35
15.8	Clock/timetable menu	36
15.9	Input/Output menu	37
15.10	Alarms history menu.....	37
15.11	Board change menu	37
15.12	Assistance menu	37
15.13	Menu overview.....	41
16	Alarms	42
16.1	Alarms resolution	44
16.2	Notifications	44
17	Declaration of conformity	45

1 Introduction

This manual aims to give all the necessary information installation and proper operation of **KITA - AIR Templari®** heat pump, from its start-up and for all its life cycle. The document is divided into chapters, each of which contains general information and procedures to be performed.



This product contains fluorinated greenhouse gases covered by the Kyoto Protocol. Do not vent gases into the atmosphere.

1.1 General Notes

- The selection and the use of the unit that serves the plant shall be carried out by competent staff in accordance with regulations in place, so as to fully satisfy the demands of the system.
- Installation, commissioning and maintenance must be performed by competent staff that must be able to assess risk factors or malfunctioning of the machine.
- The unit is directly supplied by the manufacturer with all the options and functionalities. Tampering with any part of the refrigerator circuit or the software are not allowed. Any tampering will invalidate the manufacturer responsibilities.
- Regular inspections and proper maintenance of the heat pump **KITA - AIR Templari®** can prevent damages and any costs for repairs.
- The warranty is void for an installation that doesn't meet the specifications.
- Keep this manual with the necessary diagrams in an easily accessible place.
- In case of malfunctioning, check the error code on the control panel, if necessary contact the installer. If necessary, please request for original parts.
- You can find all informations on the **KITA Templari®** label, in accordance with the regulation on labeling, in particular you can find:
 - Voltage and frequency of Power supply of the machine;
 - Thermal power in heating and cooling;
 - Maximum power consumption;
 - Sound power level;
 - The refrigerant utilized.

1.2 Suggested tools


- Set of screwdrivers;
- Cutter;
- Scissors;
- Set of wrenches or pipe wrenches;
- Ladder;
- Pumber material to seal the threads;
- Electrical equipments for connections;
- Protective gloves;
- Testers and current clamp;

1.3 Series description

KITA - AIR Templari® heat pump series presents air to air machines which are composed by an external and internal unit (aerothermal unit) for heating and cooling in big spaces applications.

KITA - AIR Templari® is full-inverter with high performance and generously sized component to reach high energy efficiencies. Another feature is the EVI technology (Enhanced Vapour Injection) that enlarges the operating zone and the thermal power of the machine. The R410A refrigerant allows the achievement of high performances and low environmental impact. Full reliability and optimal functionality are ensured by two electronic valves, a 4-ways valve, pressure transducers, temperature probes, controlled by the electronics onboard. The user can control the whole machine functionalities by a remote panel controller: by this control it is possible to change the setpoint and the working mode (summer/winter) and to monitoring the operations.

Internal unit

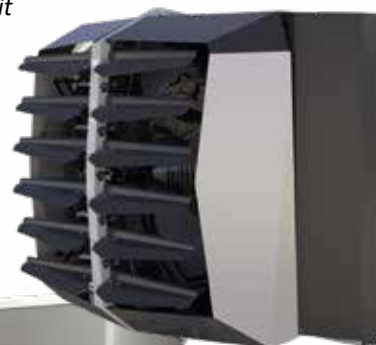

External unit



2 Read Carefully before use

2.1 Important information

ATTENTION!!

The use and the maintenance of the **KITA - AIR Templari®** heat pump, are subjected to the juridical ordinances of the destination country. Depending on the amount of refrigerant you need to check and note the tightness of the heat pump at regular intervals referring to qualified personnel.

- During transport it's possible tilt the external unit not over 45° (in any direction).
- Transport protection must be removed before to commissioning.
- Don't cover or reduce the suction area.
- Comply with the building regulations specific to individual countries.
- If the heat pump is installed near the wall, be careful to the influence of building physics factors. Make sure that there aren't windows in the fan discharge area.
- If the heat pump is installed near a wall, there is a higher risk of deposit of impurities. Besides, external air moved by the heat pump must escape in order to not increase the building thermal losses.
- It is not allowed the installation of the external unit or of the monoblock in niches or in interior courtyards, because the cooled air accumulates on the ground and in the case of prolonged functioning would aspirated again by the heat pump.
- The frosting limit can change depending on climate region. Respect the regulations of the countries concerned.
- Observe correct rotational direction: in case of incorrect wiring the start of the heat pump is hindered. The unit presents a phase monitoring that indicates the correct connection.
- The heat pump could stop operations in case of too low external temperature. In case of long time power cut, please see the commissioning procedure explained forward.
- Before opening the device, make sure to switch off all the electronics.
- Only qualified staff of the customer service can operate on the device.

2.2 Important information regarding the refrigerant used

This product contains fluorinated greenhouse gases covered by the Kyoto Protocol. Do not vent gases into the atmosphere.

Refrigerant type: R410A

GWP(1) value: 1975


(1) GWP = global warming potential

Please fill in with indelible ink,

- ① the factory refrigerant charge of the product,
- ② the additional refrigerant amount charged in the field and
- ①+② the total refrigerant charge

on the fluorinated greenhouse gases label supplied with the product.

The filled out label must be applied to the product near the product's serial label.



 Contiene gas fluorurati ad effetto serra inclusi nel protocollo di Kyoto
 Contains fluorinated greenhouse gases covered by the Kyoto Protocol
 Enthält fluorierte Treibhausgase, die durch das Kyoto-Protokoll abgedeckt werden

R410A

① = Kg A

② = Kg B

① + ② = Kg C

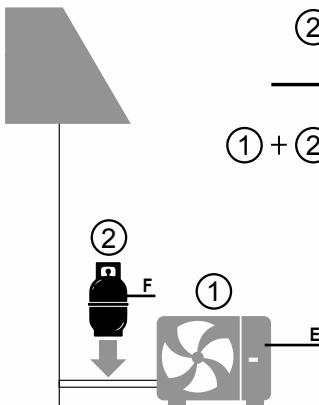

① Carica di refrigerante di fabbrica del prodotto: vedi targhetta con il nome dell'unità / Factory refrigerant charge of the product: see unit name plate / Werkseitige Kältemittelbefüllung des Produktes: siehe Typenschild der Einheit

② Quantità di refrigerante aggiuntiva nel campo / Additional refrigerant amount charged in the field / Zusätzliche am Montageort befüllte Kältemittelmenge

③ Carica di refrigerante totale / Total refrigerant charge / Gesamte Kältemittelbefüllung

A Factory refrigerant charge of the product: see unit name plate

B Additional refrigerant amount charged in the field

C Total refrigerant charge

D Contains fluorinated greenhouse gases covered by the Kyoto Protocol

E Outdoor unit

F Refrigerant cylinder and manifold for charging

NOTE!

National implementation of EU regulation on certain fluorinated greenhouse gases may require to provide the appropriate official national language on the unit. Therefore an additional multilingual fluorinated greenhouse gases label is supplied with the unit. Sticking instructions are illustrated on the backside of that label..

2.3 Proper use

KITA - AIR Templari® heat pump is homologated only for the expected use, and it must be used as described by this manual. A different utilization mode is considered non-compliant. Any modification of the device is forbidden.

2.4 Regulatory

This device, in accordance to the 1st article of the 2006/42/ CE Directive, must be use only in residential environment, and hence is subjected to the 2014/35/UE Directive (Low voltage supply).

For design and realization of the heat pump all the CE directives and all the DIN and VDE have been observed.

The electric connection of the heat pump must be made in accordance with the VDE, EN and DIN specifications. Besides, the specifications for the electrical connections fixed by the supplier must be observed.

People, in particular children, that due to physical or mental diseases or lack of experience can't use the device in safe, mustn't use the device without an expert guide. Make sure that children don't play with the heat pump.

2.5 Energetic saving

KITA Templari® contributes to environmental saving. To properly utilize the thermal energy contained in the air, make sure of a correct disposition of energy sources and plant. In order to obtain an high energy efficiency is necessary to reduce as much as possible the temperature difference between the external air and internal air. For this reason a correct sizing and design of the plant is recommended. **For a temperature difference of 1°C higher, it means an increase in consumption of 2,5%.** Avoid to place the internal unit inside dusty ambients. The dust may accumulate on the heat exchanger decreasing its efficiency. The same in the case of corrosive volatile substances.

3 Expected use of the heat pump

3.1 Operating area e safe devices

KITA AIR Templari® heat pump has to be used with external air temperature between -30°C and 46°C.

Internal air temperature range:

- **Heating:** min. temperature 15°C, max. temperature 35°C
- **Cooling:** min. temperature 20°C, max. temperature 28°C
- KITA AIR Templari® heat pump is equipped by a pressure switch that stops the machine operations when a pressure of 4.05 MPa (40.5 bar) is reached.

⚠ ATTENTION!

Make sure to switch off the device and to disconnect it from the electric connection before performing maintenance. In particular, make sure that the main switch installed near the external unit is switched off.

- KITA AIR Templari® heat pump is equipped by a discharge temperature probe that controls the discharge temperature.

i NOTE!

The device is not suitable for use with an external inverter. If the machine is powered off (disconnected from the net) for long periods, do not interrupt the procedure of the oil warming that starts when the machine is powered once again. This procedure prevents the compressor breakdown.

3.2 Heat pump structure

The heat pump system includes the following components:


- **The KITA AIR Templari®** external unit contains the refrigerant circuit;
- **KITA AIR Templari®** internal unit (aerothermal) for the diffusion of the air inside ambient;

- Remote control panel;
- B2 temperature probe.

3.3 Operation mode


The heat pump can operate in two modes, actionable trough the switching of the 4 way valve: as shown below, this modes are heating and cooling.

Heating mode

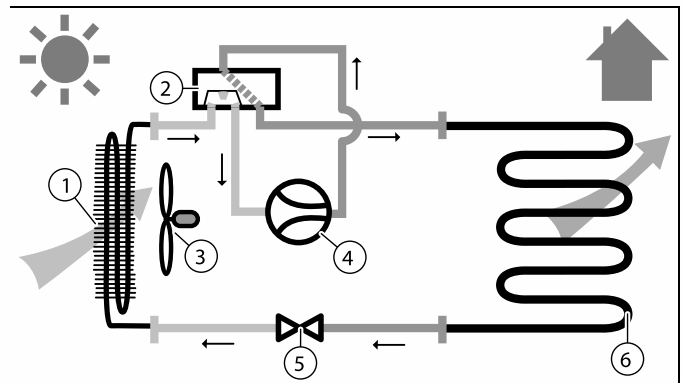

- | | | | |
|---|------------|---|----------------------------|
| 1 | Evaporator | 5 | Electronic expansion valve |
| 2 | 4-W valve | 6 | Internal unit exchanger |
| 3 | Fan | | |
| 4 | Compressor | | |

Cooling mode

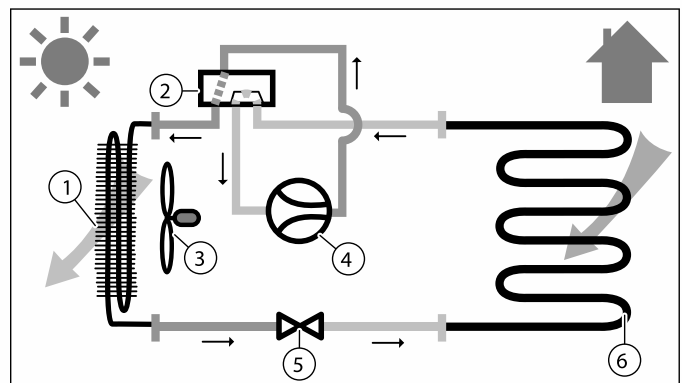

- | | | | |
|---|------------|---|----------------------------|
| 1 | Evaporator | 5 | Electronic expansion valve |
| 2 | 4-W valve | 6 | Internal unit exchanger |
| 3 | Fan | | |
| 4 | Compressor | | |

4 Equipment supplied


4.1 Main unit

The KITA AIR Templari® heat pump is provided in 2 units and it's consists of components which are indicated at page 4.

4.2 Type name and serial number

Model name and serial number are on the plate (1) figure 1.

figure 1

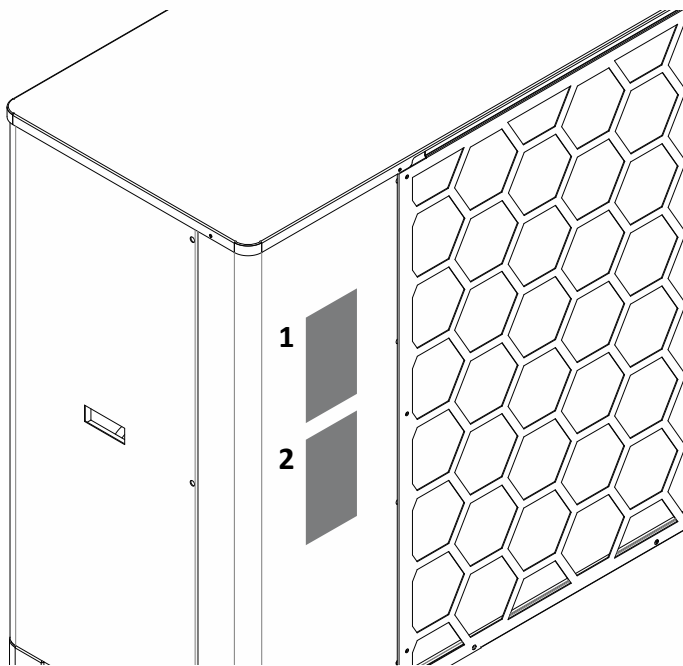


LABELS

- 1 – identification label
2 – refrigerant charge label

- 1 – identification label

2 – refrigerant charge label

 **Contiene gas fluorurati ad effetto serra inclusi nel protocollo di Kyoto**
Contains fluorinated greenhouse gases covered by the Kyoto Protocol
Enthält fluorierte Treibhausgase, die durch das Kyoto-Protokoll abgedeckt werden


R410A

① = Kg

② = Kg

① + ② = Kg

③

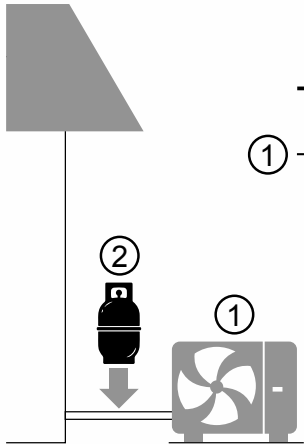



① **Carica di refrigerante di fabbrica del prodotto: vedi targhetta con il nome dell'unità / Factory refrigerant charge of the product: see unit name plate / Werkseitige Kältemittelbefüllung des Produktes: siehe Typenschild der Einheit**


② **Quantità di refrigerante aggiuntiva nel campo / Additional refrigerant amount charged in the field / Zusätzliche am Montageort befüllte Kältemittelmenge**

③ **Carica di refrigerante totale / Total refrigerant charge / Gesamte Kältemittelbefüllung**

To fill in the gas refrigerant label, make reference to par. 2.2

		Templari srl Via Pitagora 20/A 35030 Rubano - PD info@templari.com +39 049 5225929
Wärmepumpe / Heat pump/Chiller / Pompa di calore		
Model / Model / Modello	KITA M SPLIT	
Baujahr / time of production / Anno di fabbricazione	2020	
Wärmeleistung / Heating Capacity / Potenza nominale a pieno regime in riscaldamento	16,58 kW	
Kühlleistung / Cooling Capacity / Potenza nominale a pieno regime in raffreddamento	13,50 kW	
Anschluss-Spannung / Supply / Alimentazione	230V / 50Hz	
Maximaler Laststrom / Maximum Input Current / Massima corrente assorbita	29A cosφ 0,9	
Gewicht / Weight / Peso netto	OUTDOOR - INDOOR	200 / 50 kg
DGRL Kategorie / PED Category / Categoria PED	I	
R410a Kältemittelmenge / Refrigerant Charge R410A / Refrigerante R410a	6,5 kg	
CO₂-Äquivalent / CO₂ equivalents / CO₂ equivalente	13.572 Kg	
Maximal zulässigen Druck / Max pressure permissible / Pressione massima ammissibile	Hp: 45 bar Lp: 30 bar	
Kompressortyp / Compressor type / Tipo compressore	Inj	
<p>Hinweis: die Wärmeleistung wurde in Standardkonditionen geprüft, mit trockene/nasse Testspitze 7 (6)°C, Wassertemperatur in/out 30/35°C. Die Kühlleistung wurde in Standardkonditionen geprüft, mit trockene Testspitze 35°C, Wassertemperatur in/out 18/23°C. Leistungswerte nach den Norm EN14511.</p> <p>Nota: Heating capacity tested in standard condition of temperature: external 7/6°C dry/wet bulb and 30/35°C water inlet/outlet temperature Cooling capacity tested in standard condition of temperature: external 35°C dry bulb and 18/23°C inlet/outlet water temperature Tests in accordance with EN14511.</p> <p>Nota: La capacità di riscaldamento è stata testata in un ambiente standard con temperatura di test di bulbo secco/bagnato 7 (6)°C temperatura dell'acqua in/out 30/35°C. La capacità di raffreddamento è stata testata in un ambiente standard con temperatura di test di bulbo secco 35°C temperatura dell'acqua in/out 18/23°C. Valori di potenza resa in accordo con norma EN14511.</p>		
S.N. K001713		

4.3 KITA AIR/AIR Cold Templari® external unit components diagram

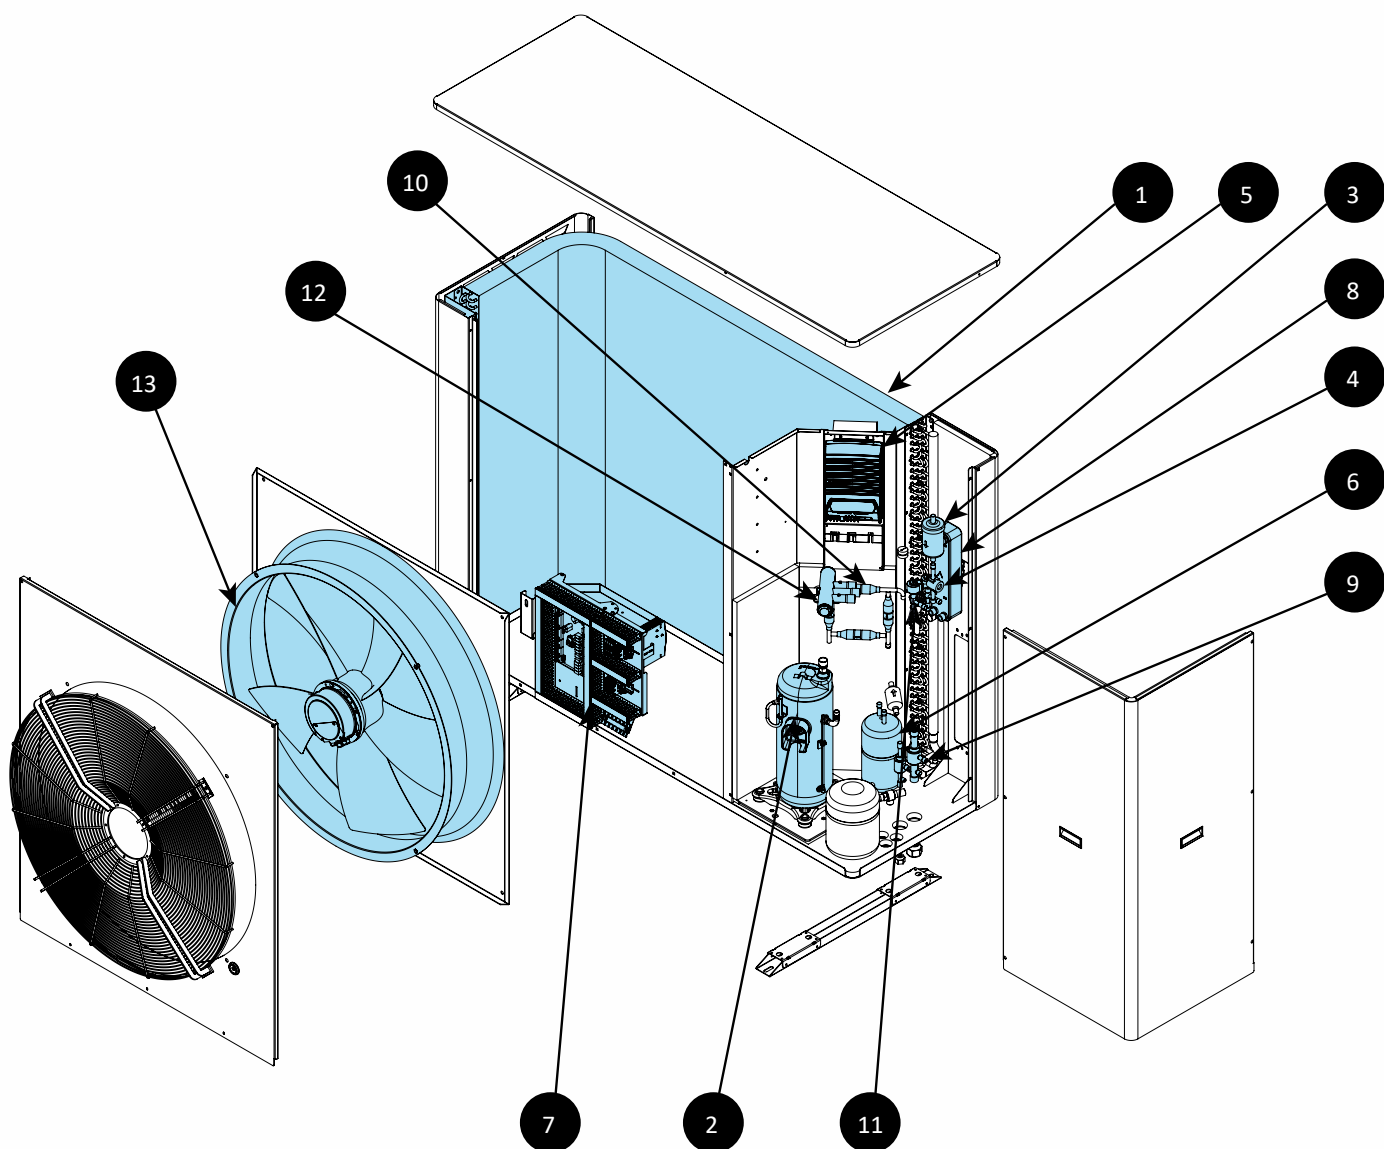


- 1 EVAPORATOR
- 2 COMPRESSOR
- 3 FILTER
- 4 LIQUID INDICATOR
- 5 INVERTER
- 6 LIQUID RECEIVER
- 7 ELECTRIC BOARD

- 8 ECONOMIZER
- 9 BALL VALVES
- 10 CHECK VALVES
- 11 ELECTRONIC EXPANSION VALVE
- 12 4-WAY VALVE
- 13 FAN

The picture has the sole purpose of indicating the main internal components. The product may not be exactly as shown in the picture.

4.4 KITA AIR PLUS Templari® external unit components diagram

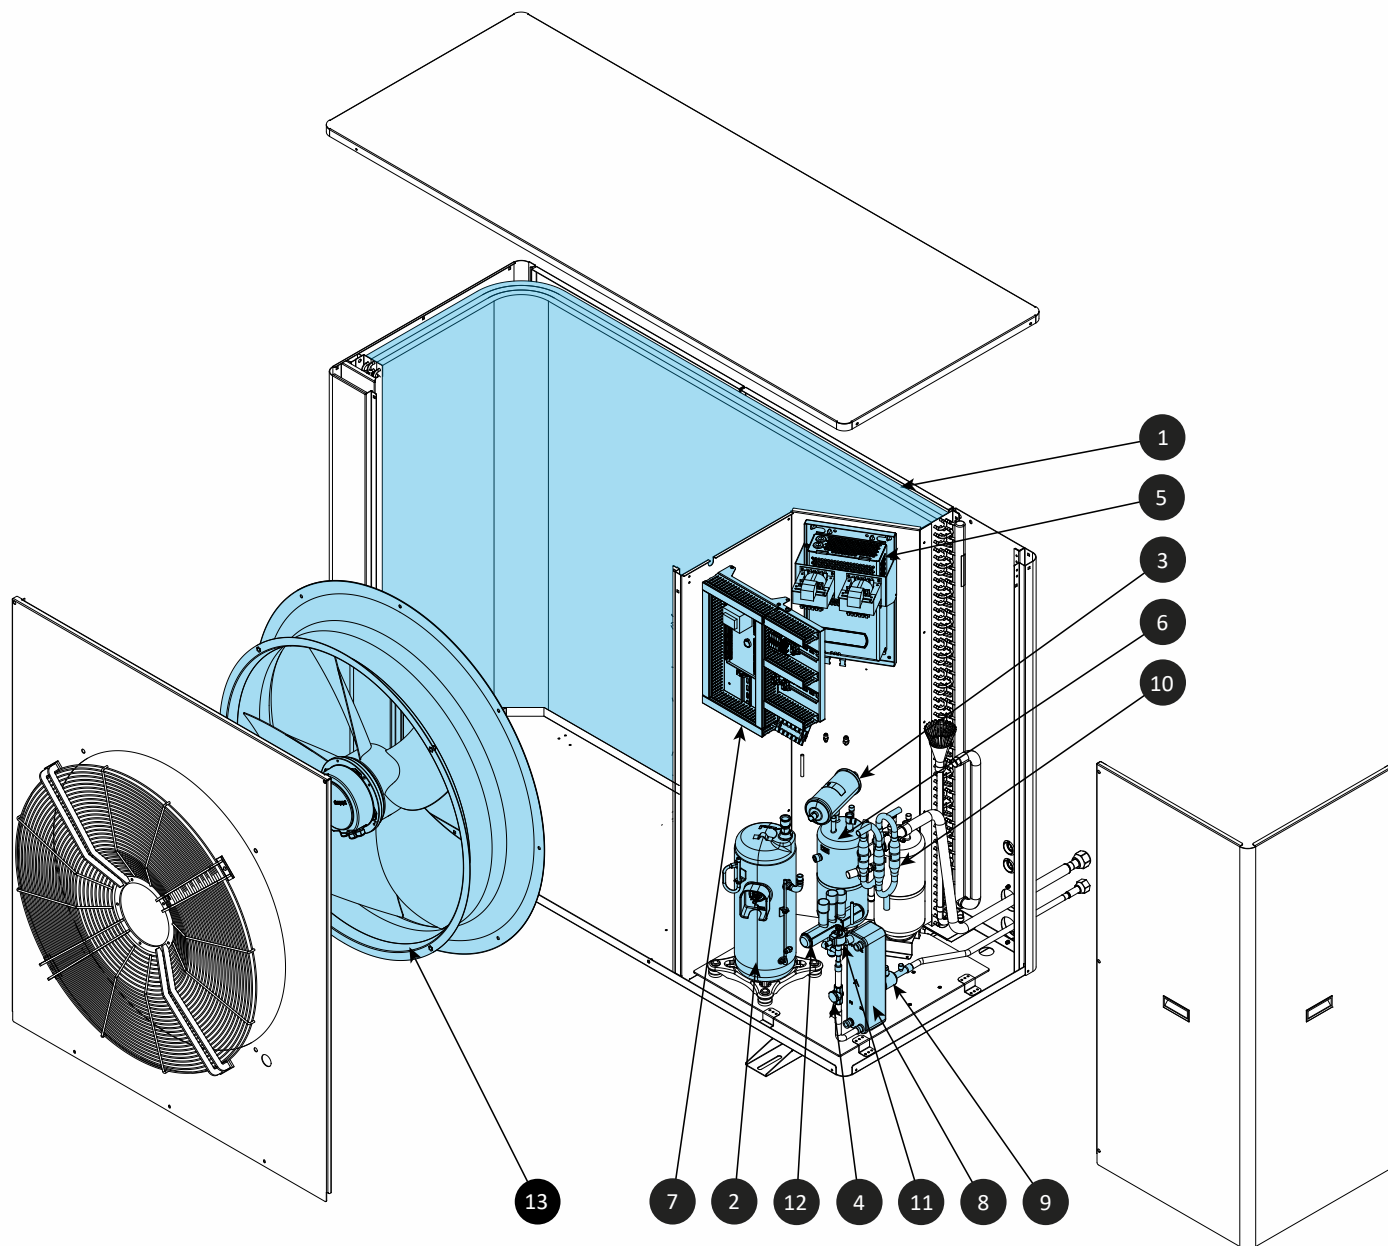


- 1 EVAPORATOR
- 2 COMPRESSOR
- 3 FILTER
- 4 LIQUID INDICATOR
- 5 INVERTER
- 6 LIQUID RECEIVER
- 7 ELECTRIC BOARD
- 8 ECONOMIZER

- 9 BALL VALVES
- 10 CHECK VALVES
- 11 ELECTRONIC EXPANSION VALVE
- 12 4-WAY VALVE
- 13 FAN

The picture has the sole purpose of indicating the main internal components. The product may not be exactly as shown in the picture.

4.5 KITA AIR/AIR Cold/AIR Plus Templari® internal unit components diagram

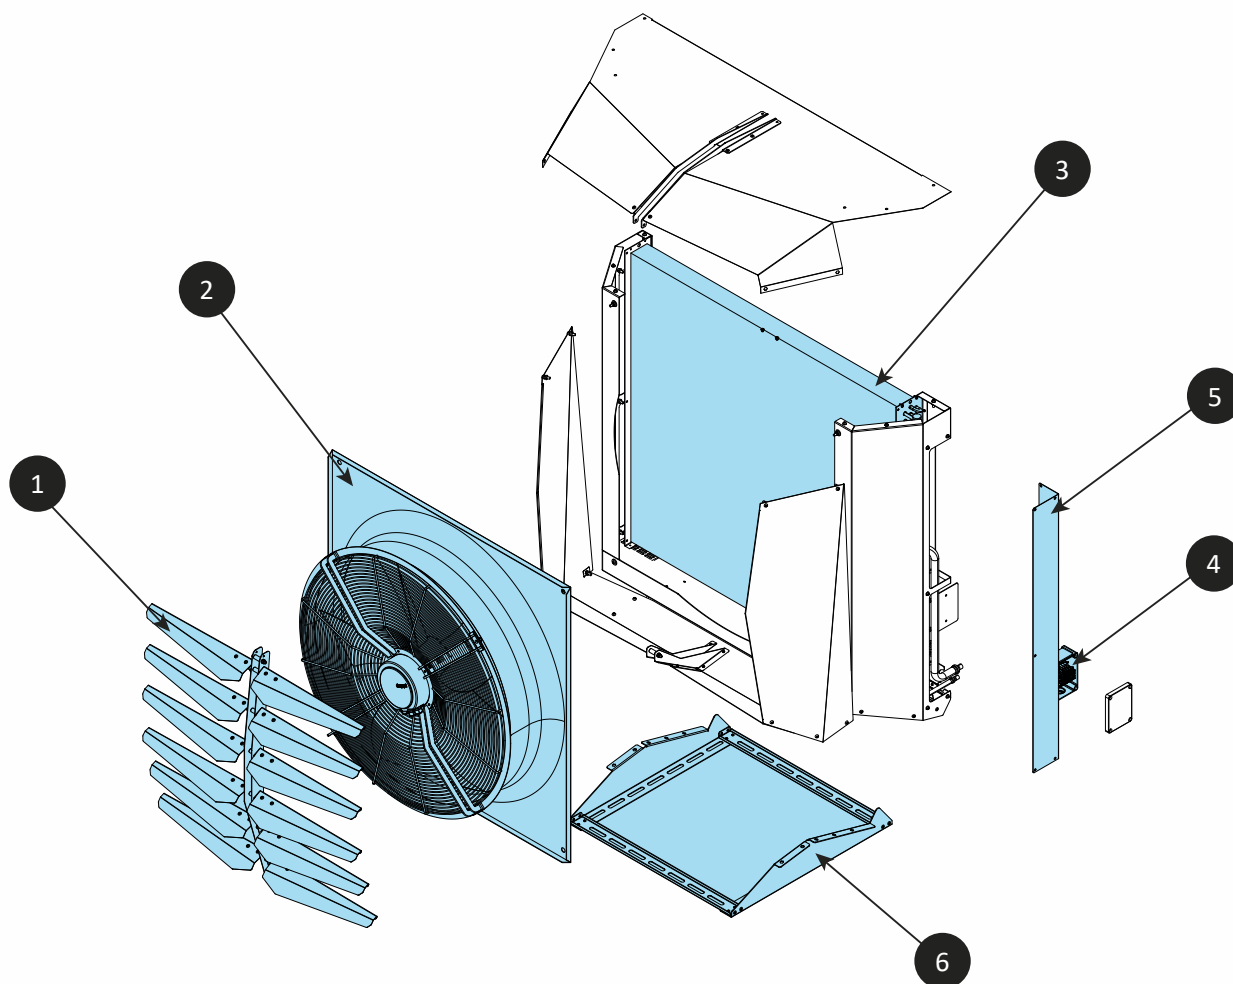

- 1 DEFLECTOR
- 2 FAN
- 3 EXCHANGER
- 4 ELECTRIC PANEL
- 5 SIDE COVER
- 6 MAIN BOTTOM FRAME


The picture has the sole purpose of indicating the main internal components. The product may not be exactly as shown in the picture.

5 Transport

⚠ WARNINGS!

Regardless of the type of transport, must never be inclined more than 45°. Contrary you can have anomalies in the refrigerant circuit in the next operation. In severe cases this may have as a consequence a failure inside.

The transport to the final place of installation should be done on a pallet. The heat pump **KITA AIR Templari®** can be transported using a forklift.

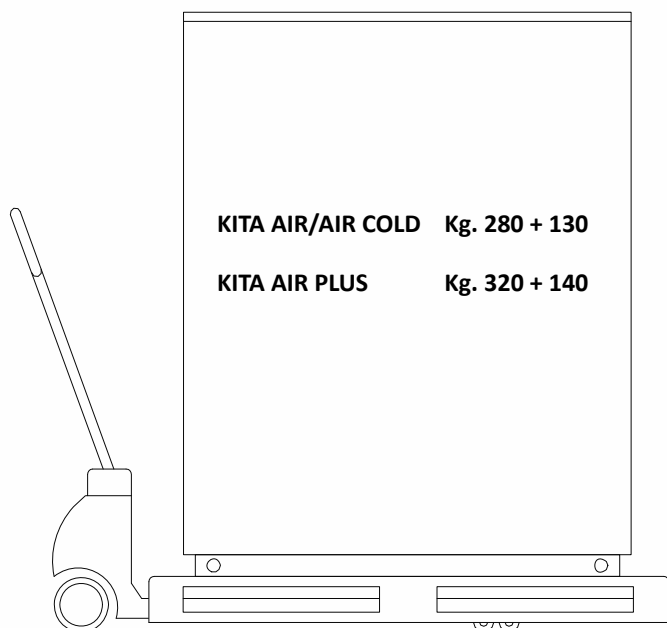

- Protect the sidewalls of the product coming into contact with the forklift to prevent scratches and damages.
- Lift the product only from the back and from the side of the fittings.
- The lifting of excessive weights can cause spinal injuries, for example.
- Consider the weight of the product reported in the technical data.
- In the transport of heavy loads, comply with the instructions and the provisions in force.
- It is recommended to pay attention do not to overexertion when lifting the internal unit. It is advisable to be at least in two persons.

6 Mounting and installation

6.1 Equipment check

- cable for remote control panel connection
- sensor probe

optional


- Anti-vibration mountings for ground fixing;
- wall support for internal unit.

6.2 External unit measurements

KITA AIR/ AIR COLD

WITH BRACKETS

Bottom view

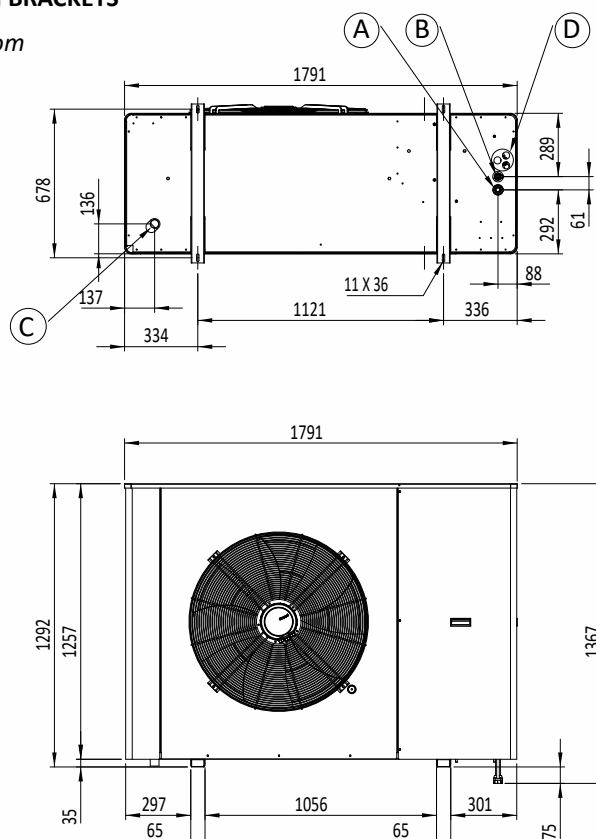


- A: gas flow / outer diameter: 22mm
- B: liquid flow outer diameter: 12mm (L42-L66 16 mm)
- C: condensate drain outer diameter: 40mm
- D: electrical wiring




* The diameter indicated is referred to the pipes assembled in the heat pump, the diameter of the refrigerant gas pipes necessary for the connection between the internal and the external unit must be 28 mm (liquid) and 16 mm (gas).

KITA AIR PLUS

WITH BRACKETS


Bottom view

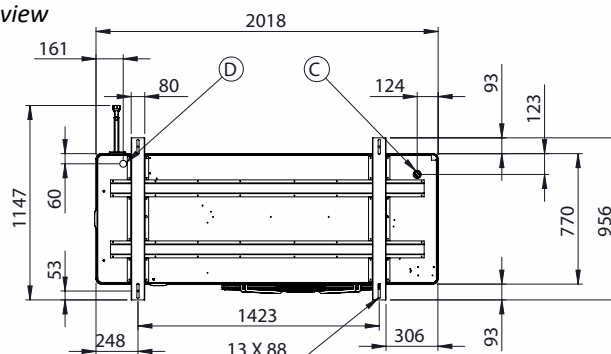

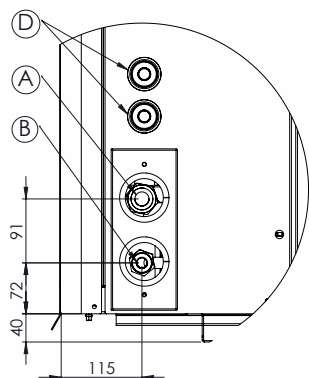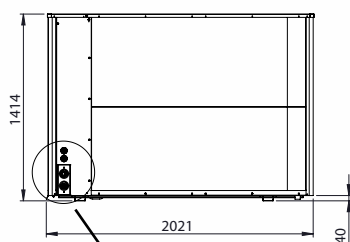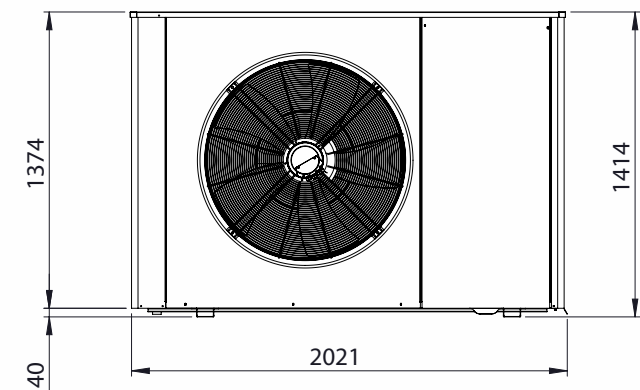

- A: gas flow / outer diameter: 28 mm
 B: liquid flow outer diameter: 16 mm
 C: condensate drain outer diameter: 40mm
 D: electrical wiring

6.3 Free spaces for the assembly

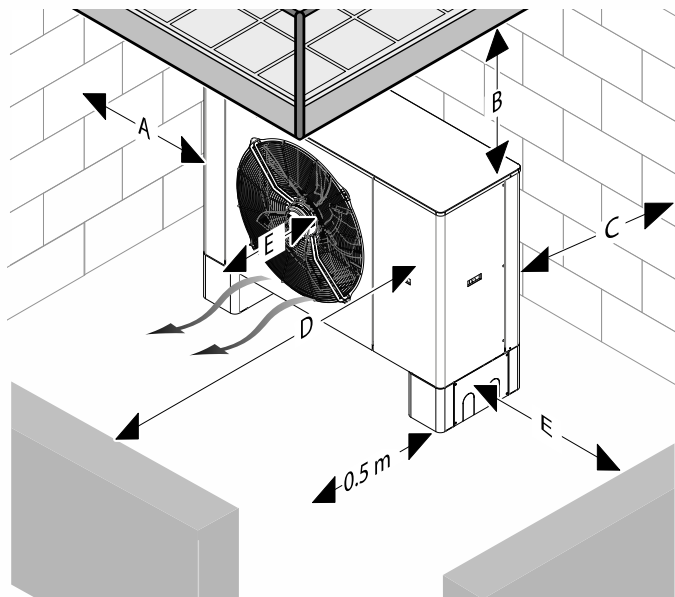

Distance	Measures in millimeters
A	>300
B	>2500
C	>500
D	>3000
E	>1000

Respect the minimum distances mentioned above to ensure a sufficient air flow and facilitate maintenance works.

- If the product is installed in areas prone to heavy snowfalls, verify the snow doesn't accumulate around the product and the minimum distances mentioned above are respected. If these conditions can't be satisfied, install then an additional heat generator in the heating circuit.

6.4 Choice of installation place

- Observe all the rules in force, included the environmental and landscape restrictions, municipal and resident regulations.
- Install the product outside the building.
- Don't install the product:
 - near a heat source,
 - near flammable substances,
 - near ventilation opening of contiguous buildings,
 - Below deciduous trees.
- For the installation of the product observe:
 - prevailing winds,
 - noise of the fan and the compressor,
 - the aesthetic impact on the building and on the surrounding environment
- Avoid the installation of the heat pump where the machine could be hit by parallel winds.
- Don't orient the fan towards the near windows.
- If necessary, install noise-protection system.
- Check if it is necessary to adopt anti-seismic criteria when installing the heat pump
- Install the product on one of the following supports:
 - Concrete pavement,
 - T steel beam
 - Concrete block.
- Don't expose the product to dusty and corrosive air (e.g. near rough roads).
- Don't install the product near wells of air discharge.
- Prepare the laying of electrical cables.
- In places where there are snowfalls, install the heat pump at least 25 cm from the ground to avoid clogging at the inlet and drain zone.

6.5 External unit mounting




- Before installing the device, please see the safety warnings in this manual.
- Install the product on T beam steel, Concrete Block or with a wall support.
- Make sure that water doesn't accumulate under the device.
- To avoid ice formation, make sure that the ground in front of the device can absorb condensed water.

6.6 Condensate discharge preparation


The condensate is discharged behind the heat pump by a unique way. Prepare the condensate discharge with a discharge pipe or with a gravel bed.

⚠ WARNINGS!


Frozen condensate on the path can cause falls. Make sure that the condensate doesn't flow on the path and that it doesn't freeze.

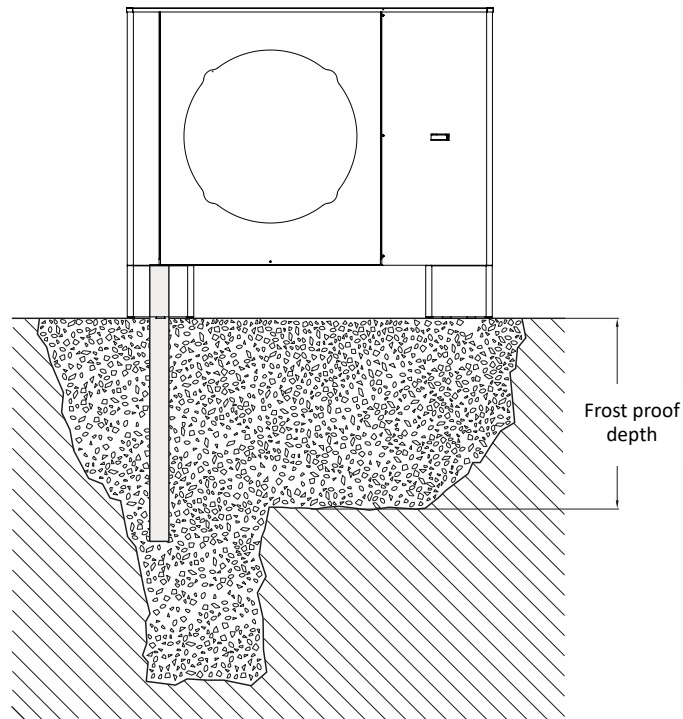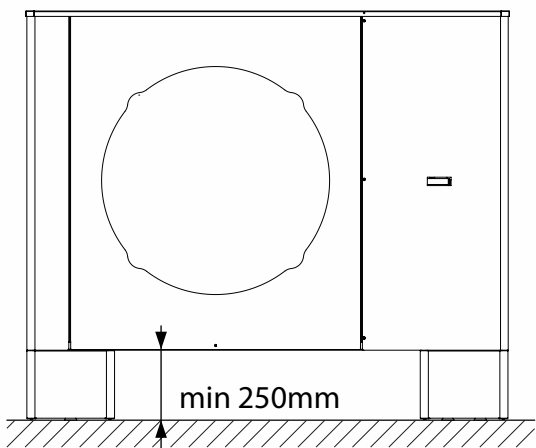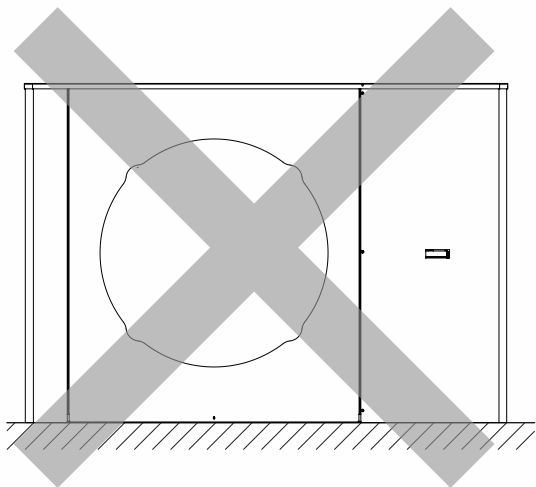


- *Example 3 condensate drain (it is recommended to bury the drain pipe to prevent the formation of ice in the event that you do not purchase optionally the heating resistor for discharge condensate)*

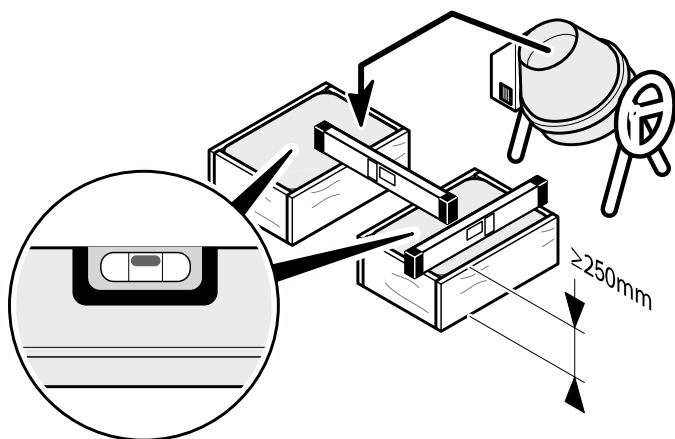

- *Preparation of the base for condensate drain*


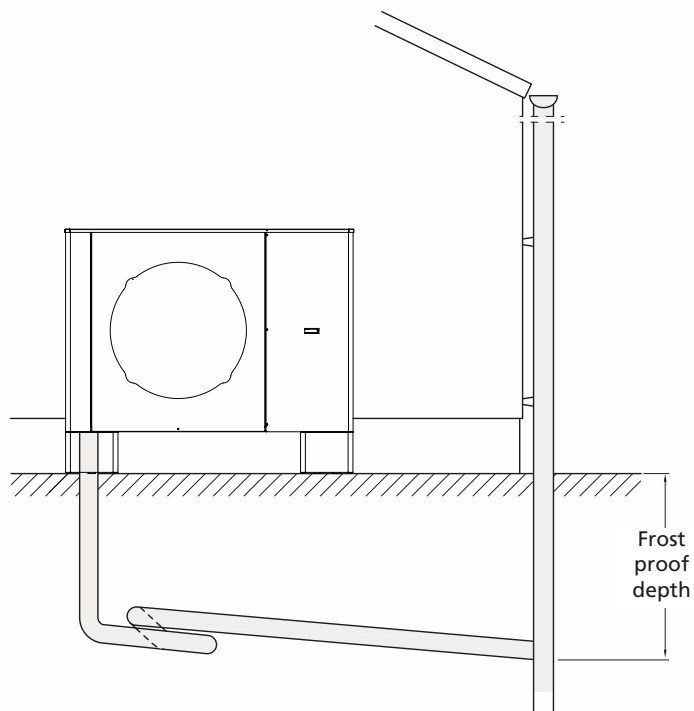


- *Example 2 condensate drain*

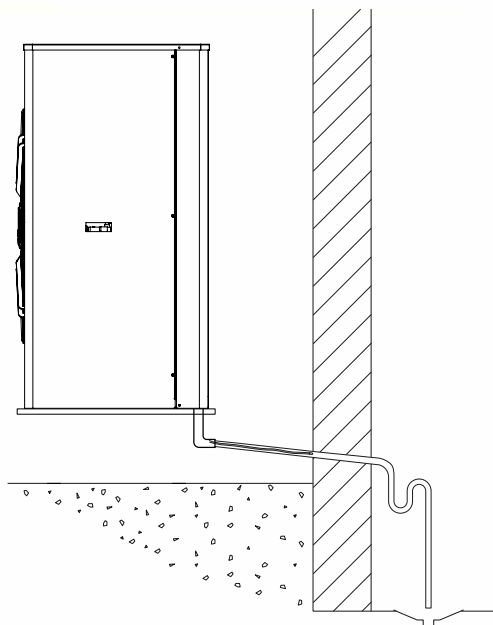

7 Installation and assembly of the internal unit

7.1 Internal unit sizes KITA AIR/AIR COLD/AIR PLUS

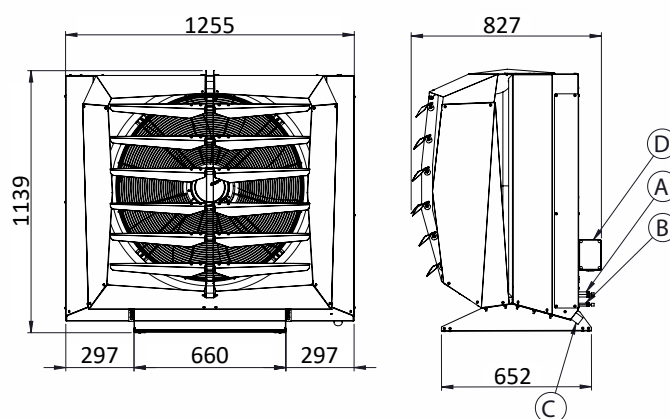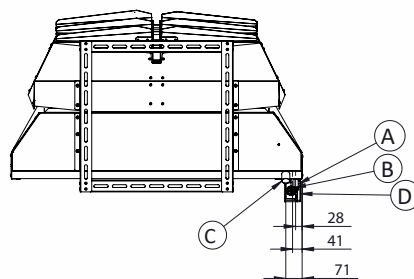

- A: gas flow / outer diameter: 22mm
- B: liquid flow / outer diameter: 12mm
- C: condensate drain / outer diameter: 32mm
- D: electrical wiring

7.2 Generalities and choice of the installation place

⚠ WARNING!

- Install the unit in an internal environment.
- The unit must not to be install near heat or steam sources.
- Install the internal unit respecting the minimal distances from walls and obstacles for facilitate the assembly and maintenance operations.
- Secure a proper air circulation.
- Install the unit in a vertical position, as shown in figure at paragraph 7.1.


• Example 3 condensate drain with condensate drain element

The condensation water accumulated during the operation must be carried away without it can freeze. To ensure the correct outflow the heat pump must be in a horizontal position. The condensation water pipe must have a minimum diametre of 18mm and must flow in the drain channel without it can freeze. Don't discharge the condensate directly into purification basins and moats. The aggressive fumes and the condensation pipe, if it isn't protected against frost, can cause irreparable damages to the evaporator.

In places where there are snowfalls, install the heat pump at least 25 cm from the floor to avoid clogging in the suction and condensate drain area.

6.7 Correct alignment



Put horizontally the heat pump KITA AIR Templari® so that the condensate can flow. The product must be installed with amortized feet, purchased separately. The amortized feet increase the height of the product, facilitating the flow of condensate and reducing vibrations.

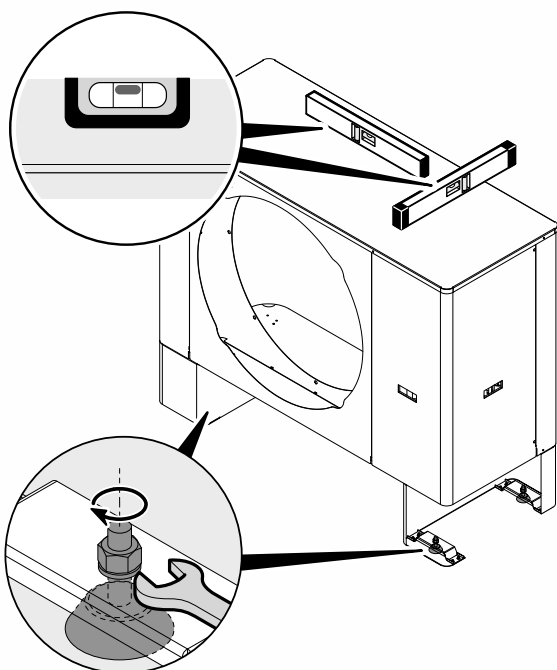


7.3 Assembly internal unit and correct positioning of B2 probe

The unit has to be fixed to the wall using dowels and L supports. Lift the unit and hang it on the wall. Caution, it is advisable to be at least in two persons or more, as the excessive weight can cause serious injuries.

The B2 probe is supplied with a 3m. prewired cable together with the internal unit

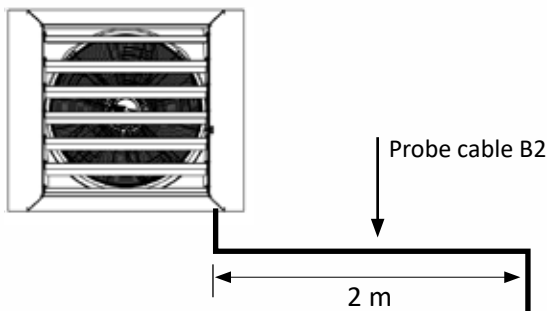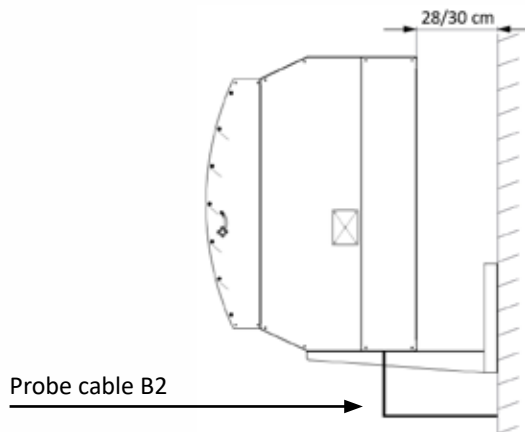

The B2 probe cable must be positioned sideways respecting a distance of 2 m from the internal unit, it must align at man height paying attention it cannot be in direct contact with the wall because it is primary that the cable of this probe be at least 3cm away from the wall.

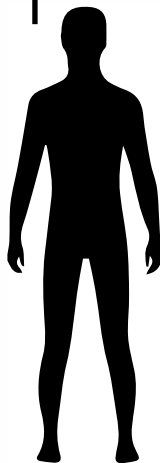

8 Refrigerant circuit connection

The refrigerant pipes connections have to be made up by qualified and licensed personnel. The connections requires the use of a weld tool.

8.1 Installation requirements

- The connecting tubes between internal and external units have to respect the below indicated dimensions.
- Non respecting of indicated measurements can lead to

significant decrease of the machine performance.

- If the height difference between the internal and external units is more than 5 m., it is necessary to install a u-trap at the base of the bigger piping. If the gap between the internal and external unit is more than 5 m an u-trap at medium height will be required.

	Nominal length	Maximum length of the piping (m of equivalent length)	Maximum height difference (m of equivalent length)	Additional refrigerant charge recommended * (g/m of equivalent length)
All models	1	30	30	45

* sub-cooling must be in a range between 3°C and 4°C with heat pump in steady state.

NOTE: the parameter equivalent length has to consider the curves too. Each 90° curve in the circuit has to be counted as a 1 m straight portion. Each 180° curve in the circuit has to be counted as a 2 m straight portion. Each oil trap in the circuit has to be counted as a 4 m straight portion.

8.2 Set up for installation and refrigerant pipelines installation

The coolant pipes connections must be sealed to prevent leakage of the coolant and the consequent malfunctioning of the heating pump. The connection pipes must be insulated and have diameters specified in the following table.

	Gas (mm)	Liquid (mm)
KITA AIR/AIR COLD AIR PLUS	Ø 28	Ø 16

For the preparation of the pipes for installation, proceed as follows:

- Measure the distance between internal and external units, and perform all necessary installation curves..
- The laying of the pipes must include the minimum number of bends, because each curve increases the pressure drop of the circuit and reduce the machine performance.
- Cut the pipes to a length slightly greater than that measured.
- Completely remove smudging from the cut section, holding the pipe downward and blowing air into the pipe.
- Respect the safety measures that are indicated into the table, or add the request quantity of refrigerant.
- Weld the (not included) anchors at the end of the connection pipe. Weld the inner side female anchors and the outer side male anchors. Where is possible, perform welding in nitrogen atmosphere. Flow the welding with nitrogen to protect the circuit from oxidation.
- Insulate carefully the refrigerant anchors and connections. It is recommended the use of thermal insulation with a minimum thickness of 6 mm.

8.3 Vacuum procedure

- We recommend to run a leak test with nitrogen to 40 bar pressure to check the quality of the welding connections
- For the vacuum perform, connect the pump charging vacuum connection procedure (1/4) inside the external unit.
- Perform the vacuum until reaching 0.4mbr pressure (duration of procedure for about 1 h for 15m total length connection. If the length increases as result will increase

duration of the vacuum perform).

- At the end of the procedure remove the pump and open the valve to pour out the refrigerant liquid.

WARNING!

it is recommended to adopt all the safety measures and use the necessary PPE while performing the above operations.

9 Maintenance and cleaning

A regularly maintenance is necessary in particular for correct and efficient heat pump operations, so as to reduce damages and usury of the components. The user decides the maintenance frequency. It depends in particular on two factors:

- The utilization mode: if the operating mode during the year is single (heat pump or chiller), an annual maintenance is suggested; if the operating mode is double (heat pump and chiller) during the year, the maintenance shall be halfyearly.
- The installation place: if the installation is located in heavy polluted places or in the presence of dust that could obstruct the finned coil, it is suggested to frequently check the finned coil conditions and, if necessary, to supply a more frequent maintenance.

WARNING!

Before carrying out any maintenance operation you must disconnect the power supply in order to avoid any injuries. Make sure that the main switch installed near the external units is switched off.


9.1 Finned coil cleaning

During the machine functioning it's possible that the finned battery will partially obstructed because presence of leaves or incrustations of various kinds, also provoking a malfunctioning of the heat pump. It is possible then clean the battery with a under pressure jet of air in a parallel direction of the fins, you should also remove any deposits in the battery compartment keeping an adequate distance so as not to risk to fold or damage them.

- Clean the frontal surface;
- Remove the panel on top as shown by the figure.
- clean also the internal unit finned battery, especially if it is placed in dusty ambient

WARNING!

Don't touch the fins to avoid to be cutted. Don't fold the fins, this could reduce the performances. In case of folded fins, contact a service center.

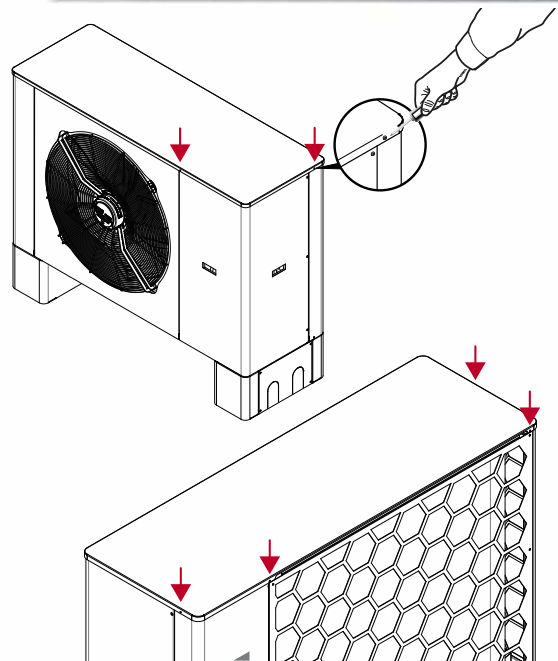

9.2 Condensate discharge cleaning

Please make sure that the condensate discharge pipe is in the correct position e without any obstruction to ensure a proper condensate flow from the finned coil fins.

9.3 Refrigerant circuit maintenance

The machine is equipped with a safety valve which ensure the reduction of internal refrigerant circuit pressure in case of external generation of heat (e.g. in case of fire).

To ensure proper operation of the valve, contact the manufacturer and make sure to replace it each 4 years.

WARNING!

The triggering of the safety valve and the consequent expulsion of the refrigerant gas may cause poisoning and injuries if in direct contact with the skin.

Do not stand or place any heat source near the safety valve.

It is necessary to empty the refrigeration circuit before performing any servicing of the heat pump that requires welding.

10 Electric connection

10.1 General information

Before starting any operation please adopt any safety device and make sure that the unit is in stable equilibrium and that there isn't any element connected to the electric supply.

It is recommended to:

- Make sure that the power line on site is compatible with the tension and absorption necessary to run the machine
- Make sure that the power supply of the heat pump (phase – neutral - ground) and the sequence of the 3 phases (L1, L2, L3) are properly wired according to the instructions.
- Make sure that upward the power supply line or the necessary safety devices (thermal breaker differential and safety switch) are properly installed according to the heat pump requirements.
- Use double insulation cables, in accordance with the existing

regulations in force in the different countries.

- At first please connect the grounding connection.
- Before switching the unit on, all protections must be active.

10.1.1 The customer/ installer has to:

1. Refer to the wiring diagram of the unit
2. Supply and install the proper differential and thermal breaker, CEI approved, as close as possible to the heat pump, inside an adequate case
3. Properly install the ground connection. The manufacturer cannot be held liable for any damage caused by the improper ground connection of the appliance.
4. Evaluate the protection from indirect contacts (differential) according to the layout of the electric wiring in the installation site.

10.2 Operations of laying

- Please install cables far from lines with different voltage or from devices that can create electromagnetic interferences.
- Avoid parallel laying with other cables, the arrangement is only permitted at 90°
- Pass the power cables and the net control cable of the machine only through proper holes.

10.3 External unit connection

- Connect the power supply to the external unit electric terminal by the following table named "power supply cables indication". Cables passage takes place through the opposite holes.
- See 12.5 for the connection of drain pan's electric heater.

10.4 Internal unit connection

- For electric connection see the following table named "power supply cables indication". See the chapter 11 the terminal picture where to connect RS485 fan contacts (2 core cable) and the sensor probe (2 core cable). The cable carries low voltage control signals: find a route far from sources of interference, do not joints along the way, possibly using a 3 core cable + shield section 1.50 sq mm (shield connected to GND to indoor unit side).
- Connect the internal unit 230V fan power supply (phase, neutral, ground) to the terminal board of the external unit through the tripolar cable (minimum section 1,5 mmq).
- Pay special attention on ground connection: the GND must be the same for the 2 units. **ABSOLUTELY AVOID THE CONTACT BETWEEN THE SIGNAL GND AND THE THE GND OF POWER SUPPLY!**

WARNING!

The section of the supply cables is to be considered indicative and relative to the last part of the line towards the machine, that should be as shorter as possible. The external protections, the position and cable section of the previous supply line should be sized and realized by an authorized person and according to the technical standards of the national authorities.

10.5 Probes and control panel

The B2 temperature probe has to be installed as explained in paragraph 7.2, using the prewired cable supplied with the internal unit.

If the previously mentioned cable isn't long enough, it is possible

to use a piece of multipolar cable (shielded 2x 1,5 mmq) to extend it, following the shortest path, away from power cable and adopting all the precautions to avoid possible parasitic resistances that may interfere with the reading signal of the control board.

The B2 probe signal gets transmitted from the external unit to the internal one by a bipolar cable.

The control panel gets connected to the external unit by a 6 metres telephonic cable supplied with the heat pump (on demand up to 30 m), to be laid together with the B2 probe signal cable using the same precautions.

10.6 Power supplying

Connect the power supply to the internal terminal block as indicated in the diagram below.

Use the specific wire holes to pass the cable through.

INFORMATION AND CHARACTERISTICS OF THE PROTECTION DEVICES AND SIZING OF THE CABLES.

MODEL	Nominal power	Tension (V)	Inverter	Power supply connection	Thermal breaker ^[1]	Section of the connection cable ^[2]	Main thermal breaker ^[3]
Kita AIR	12 kW	400	24A	3P+N+T	4x32A	5G4	4x32A
Kita AIR COLD	15 kW	400	35A	3P+N+T	4x40A	5G6	4x40A
Kita AIR PLUS	16 kW	400	40A	3P+N+T	4x40A	5G6	4x40A

10.6.1 Internal unit auxiliary heater (optional)

If an auxiliary heating element kit is installed it will be necessary to arrange a dedicated power supply line with a 3-PH 400VAC thermal breaker for the 9 Kw version or a 400 V 25 A thermal breaker for the 13.5 Kw version.

The power supply line will also have to be equipped with a 3-PH 400 VAC (I_{dn}30mA) circuit breaker.

If the power supply line comes straight from the external unit terminal board it will be necessary to install a proper thermal breaker upward the external unit. The thermal breaker must be properly sized according to the above chart and be able to supply the total of the current absorbed by the heat pump and the internal unit auxiliary heater.

The external unit also in this case will require a 3-PH 400V 30mA circuit breaker.

The installation of the correct safety devices and electric line must be carried out according to the existing regulations in force in the different countries.

NOTE!

[1]

In the above chart it is indicated the characteristics of the thermal breaker that must be installed as close as possible to the external unit. The installation of this device is required to protect the terminal part of the supplying line from overcurrent and short circuit.

[2]

The section of the power cable is to be considered approximative and referred to the terminal part of the line toward the heat pump (must be as short as possible). The previously mentioned section is to be considered for a maximum length of 5m.

If the length of the cable is more than 5 m. (or for different type of cables) the authorized technician must size properly the main switch, the power line, the connection of the ground protection and connection cables according to: the installation site, environment temperature, length, type of cable and power absorption of the unit.

[3]

The siting, choice and the check-up of the protection devices upward the heat pump must be carried out only by authorized

and qualified technicians as provided for by the current legislation of the origin country.

Moreover a preliminary check, necessary for the installation of the protection devices against the indirect contacts, must be carried out.

This is the reason why we suggest the installation of class "A" differential blocks with I_{dn} = 30 mA.

It is also possible to combine a differential block for the protection from indirect contact to the thermal breaker.

10.7 Power and signal cables characteristics


EXTERNAL UNIT	
Power supply connection from main electric panel	3P+N+T - 400 Vac - 50 Hz
Power supply cable from main circuit breaker to external unit (set up by the customer/installer)	SEE CHART Maximum lenght 5 meters
400 Vac line internal safety device	3 fuses da 5x20 - 4A
24 Vdc internal safety device	1 fuses da 5x20 - 4A
INTERNAL UNIT	
Power supply line from external unit	2P+T - 230 Vac - 50 Hz
Power supply cable (set up by the customer/installer)	Minimum section 3x1,5 mmq Maximum lenght 30 meters
Signal cable from external unit to internal unit (set up by the customer/installer; ON DEMAND: supplied together with the heat pump)	Bipolar, RS485 Modbus RTU
B2 probe extension cable from internal unit to external unit. (set up by the customer/installer) (f.p.o. a cura Cliente/Installatore)	Bipolar
CONTROL PANEL	
Signal cable for standard panel to be connected to the external unit main board (supplied together with the heat pump, L=6 m; ON DEMAND: L up to 30 m)	Telephone cable
Signal cable for touch screen panel to be connected to the external unit main board	Bipolar, RS485 Modbus RTU

WARNING!


The characteristics of the power supplying/ signal cables of the chart above must be verified according to the current legislation.

11 Terminal box wiring


11.1 Internal terminal box wiring

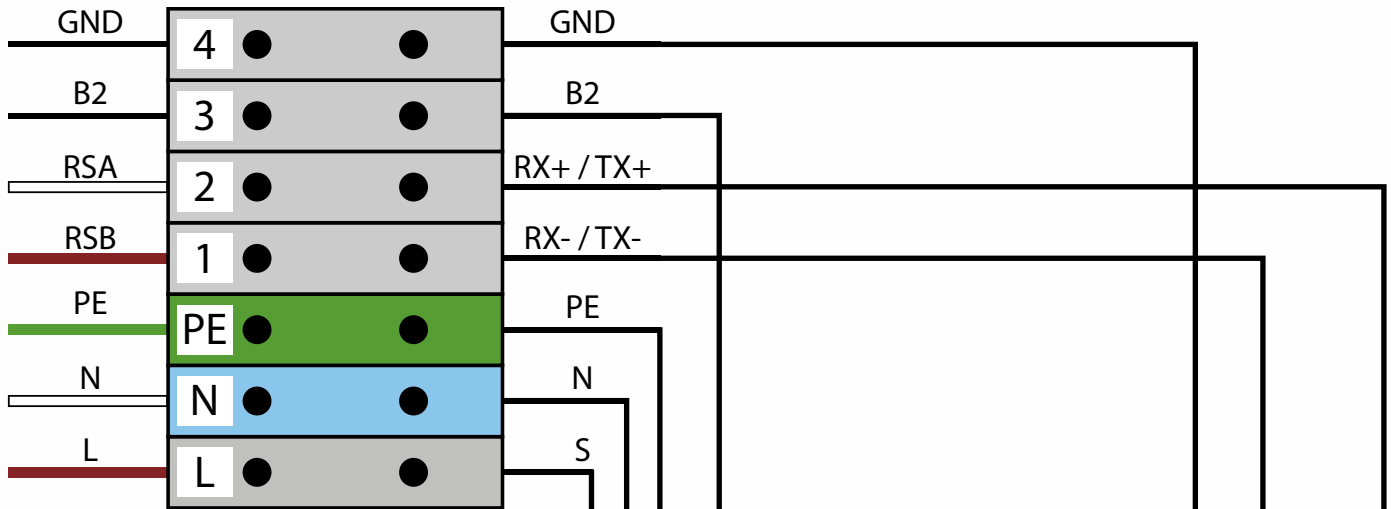


11.2 External unit internal terminal box wiring KITA - AIR

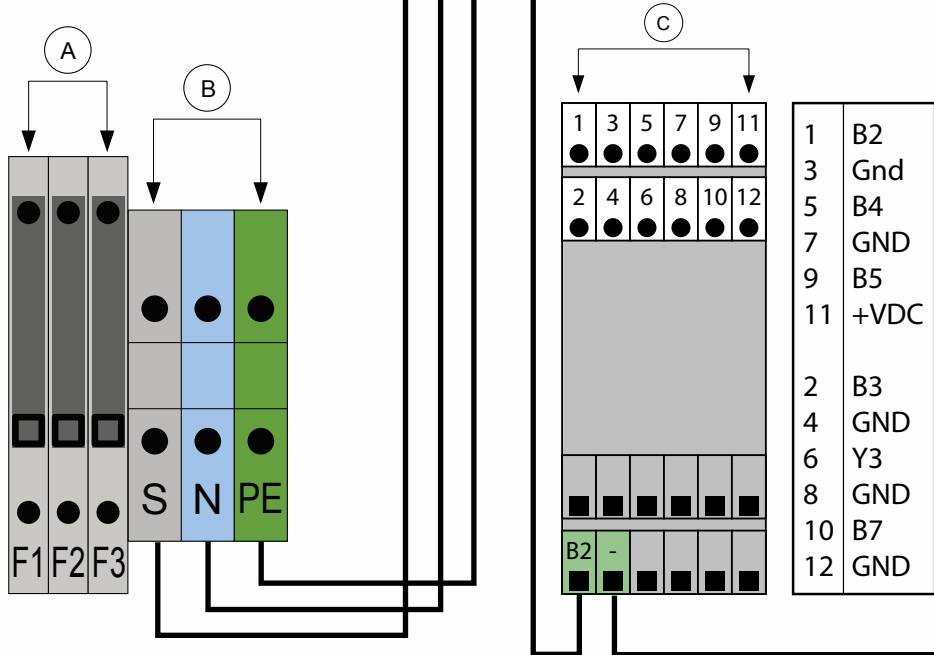

230V auxiliary power supply internal fan

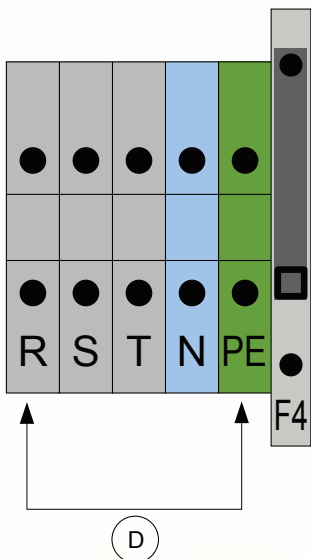

- A Auxiliary fuses 4 A
- B Power: Phase, Neutral and Ground for internal split
- C Sensor terminal block (the symbol - indicates GND, the symbol + indicates +VDC)
- D Supply: Power wiring terminal

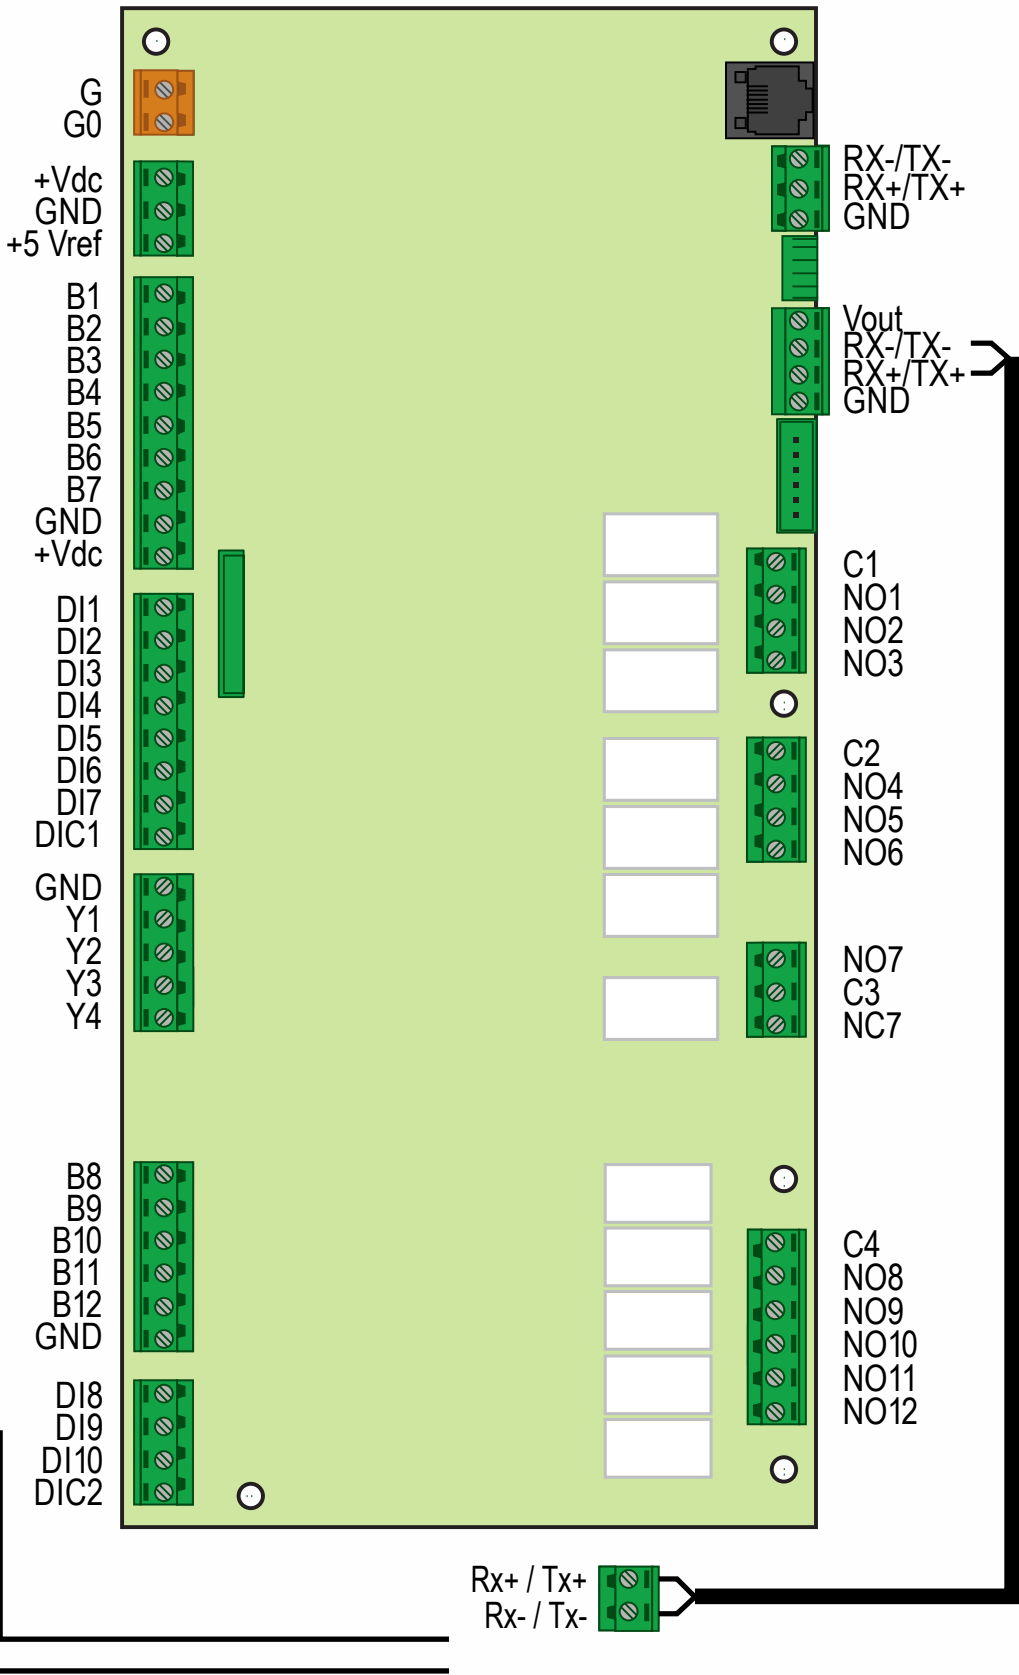


Connector description:

B1	Subcooling
B2	Radiant probe
B3	Domestic probe
B4	Return probe
B5	Flow meter
B6	Head compressor probe
B7	Flow probe
B8	External temperature probe
B9	Drain probe
B10	Suction probe
B11	High pressure transducer
B12	Low pressure transducer
DI1	Summer-winter switch
DI2	Thermal sensor
DI3	High pressure switch
DI4	/
DI5	Disable plant
DI6	/
DI7	System auxiliary heater security
DI8	Remote on-off
DI9	Switch modbus controller
DI10	Flow switch
Y1	/
Y2	Internal fan KITA Air
Y3	PWM circulator
Y4	External fan KITA Air
NO1	Integration
NO2	Defrost
NO3	Air-air or air-water indicator
NO4	Circulation pump
NO5	Condensate drain heating
NO6	Plant integration demand
NO7	General alarm
NO8	DHW integration demand
NO9	3-way valve
NO10	4-way valve
NO11	Oil heating
NO12	Desuperheater

Connect the Modbus RS485 port on the uPC using the proper cable (image on the side)

12 Electronics (UPC)

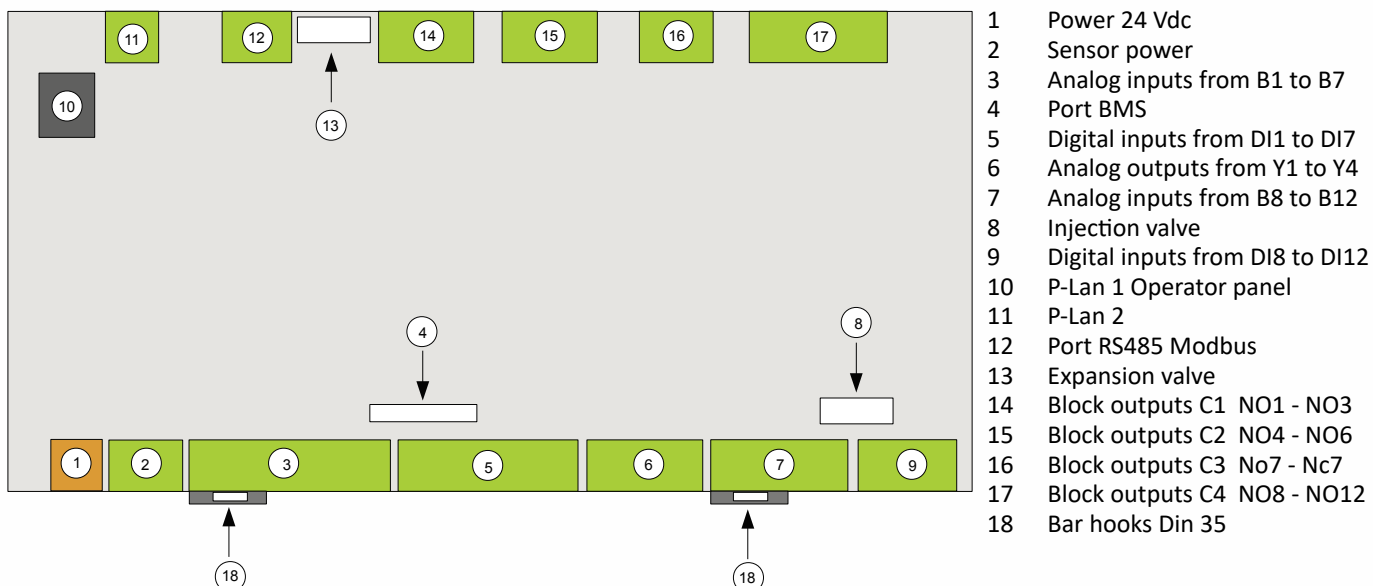

12.1 Digital outputs

KITA AIR

NO1	/
NO2	/
NO3	/
NO4	/
NO5	Condensate discharge heater
NO6	alternative power source
NO7	/
NO8	/
NO9	/
NO10	4 way valve for cycle inversion
NO11	Compressor carter heater
NO12	/

12.2 Digital inputs

KITA AIR

ID1	Winter/Summer commutation
ID9	Thermic compressor discharge
ID3	Pressure switch for high pressure
ID4	/
ID5	/
ID6	/
ID7	/
ID8	Remote on-off
ID10	Flow switch

12.3 Analogical outputs

KITA AIR


Y1 (0-10V)	/
Y2 (0-10V)	/
Y3 (0-10V/PWM))	/
Y4 (0-10V)	/

12.4 Analogical inputs


KITA AIR

B1 (NTC HS)	
B2 (NTC)	Internal ambient temperature
B3 (NTC)	
B4 (NTC)	
B5 (NTC)	
B6 (0-5V)	Injection pressure transducer
B7 (NTC)	
B8 (NTC)	External temperature
B9 (NTC HT)	Compressor discharge temperature
B10 (NTC HS)	Compressor suction temperature
B11 (0-5V)	High pressure transducer
B12 (0-5V)	Low pressure transducer

12.5 KITA AIR AND AIR COLD electric diagram

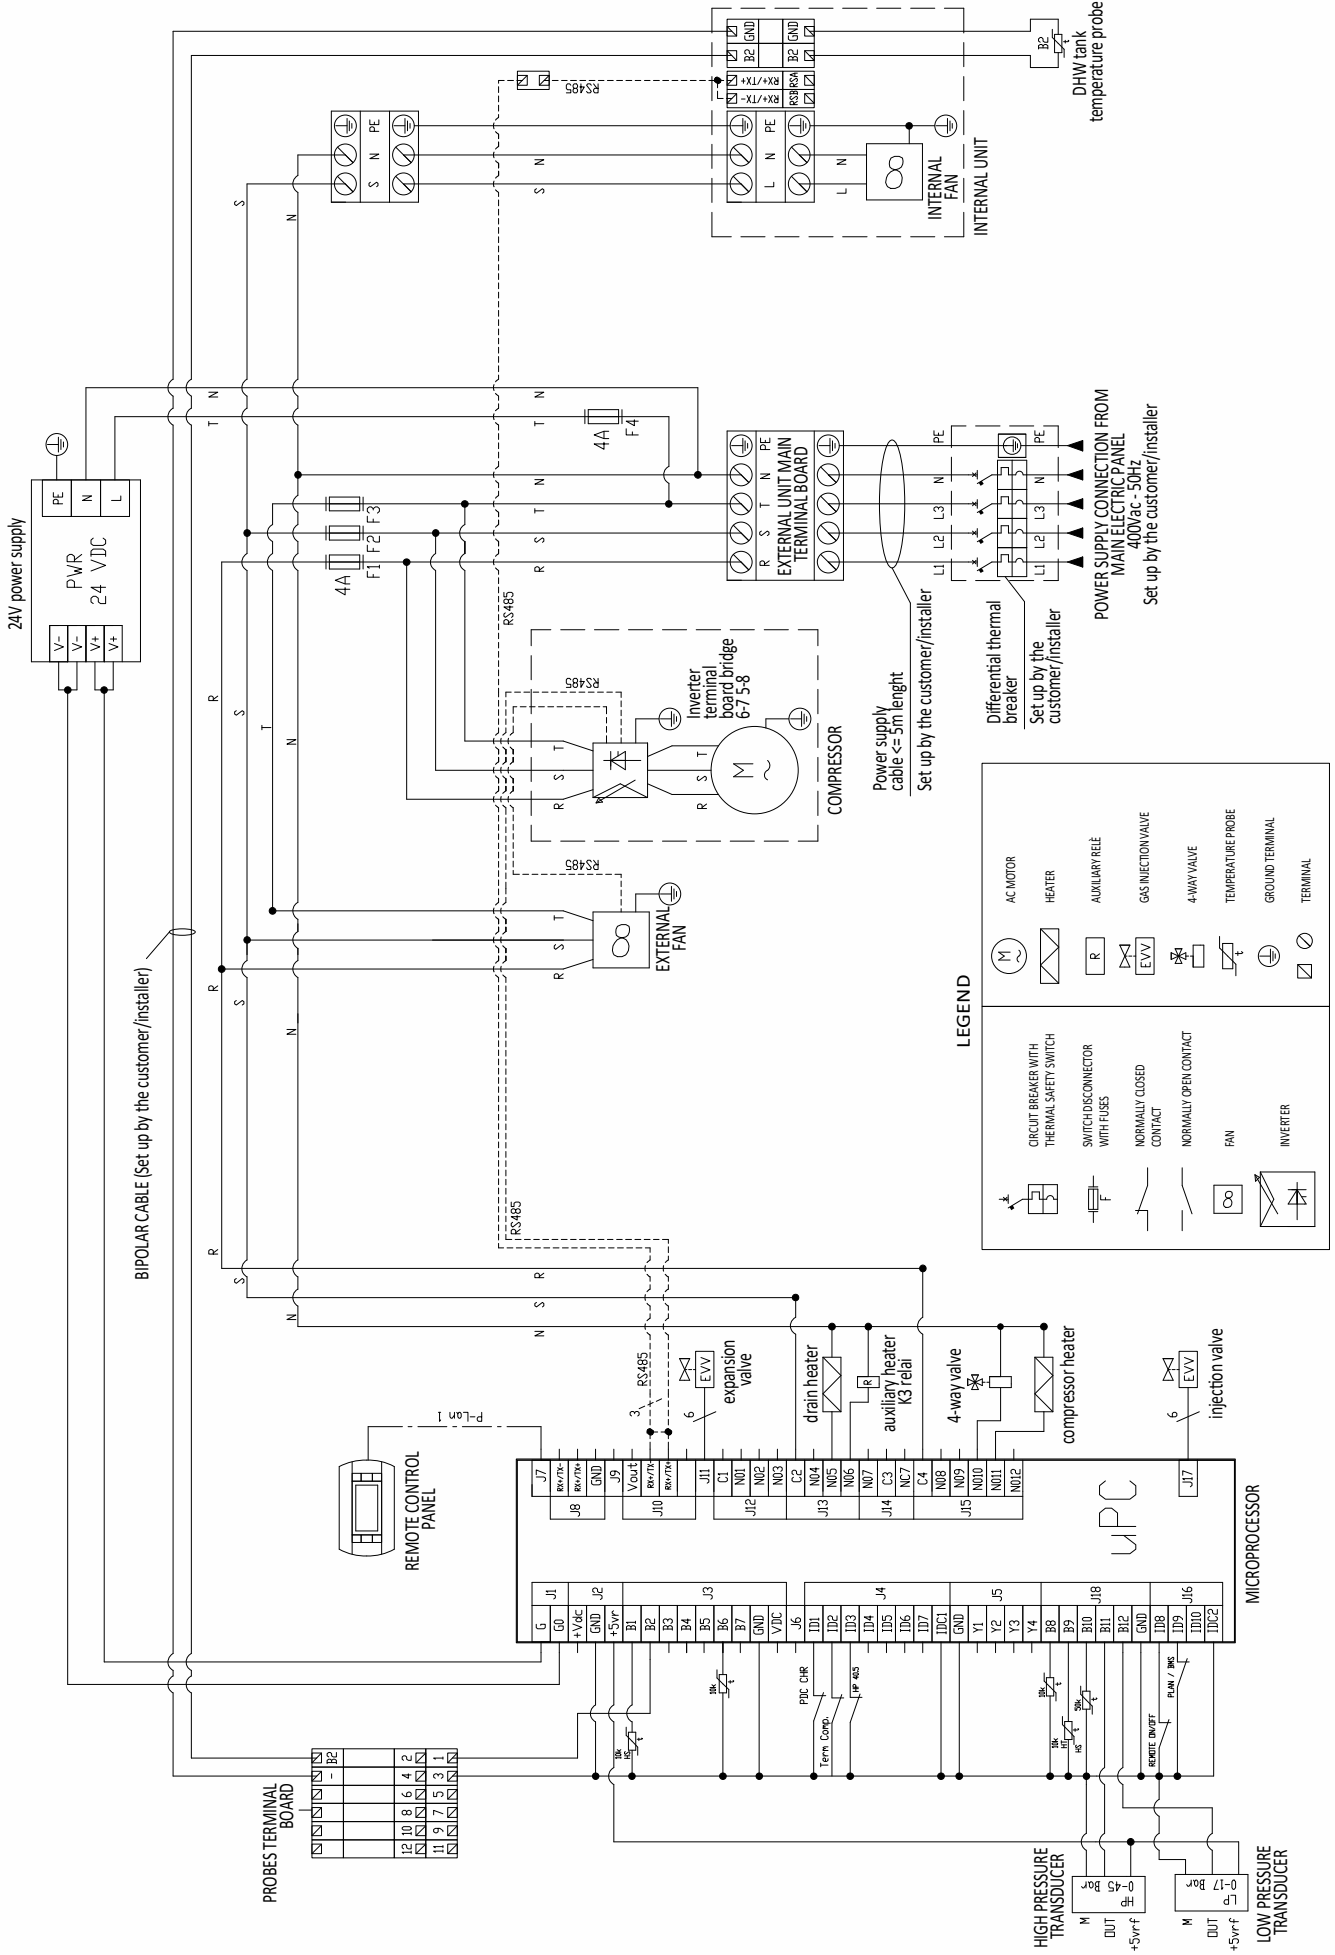


12.6 KITA AIR PLUS electric diagram

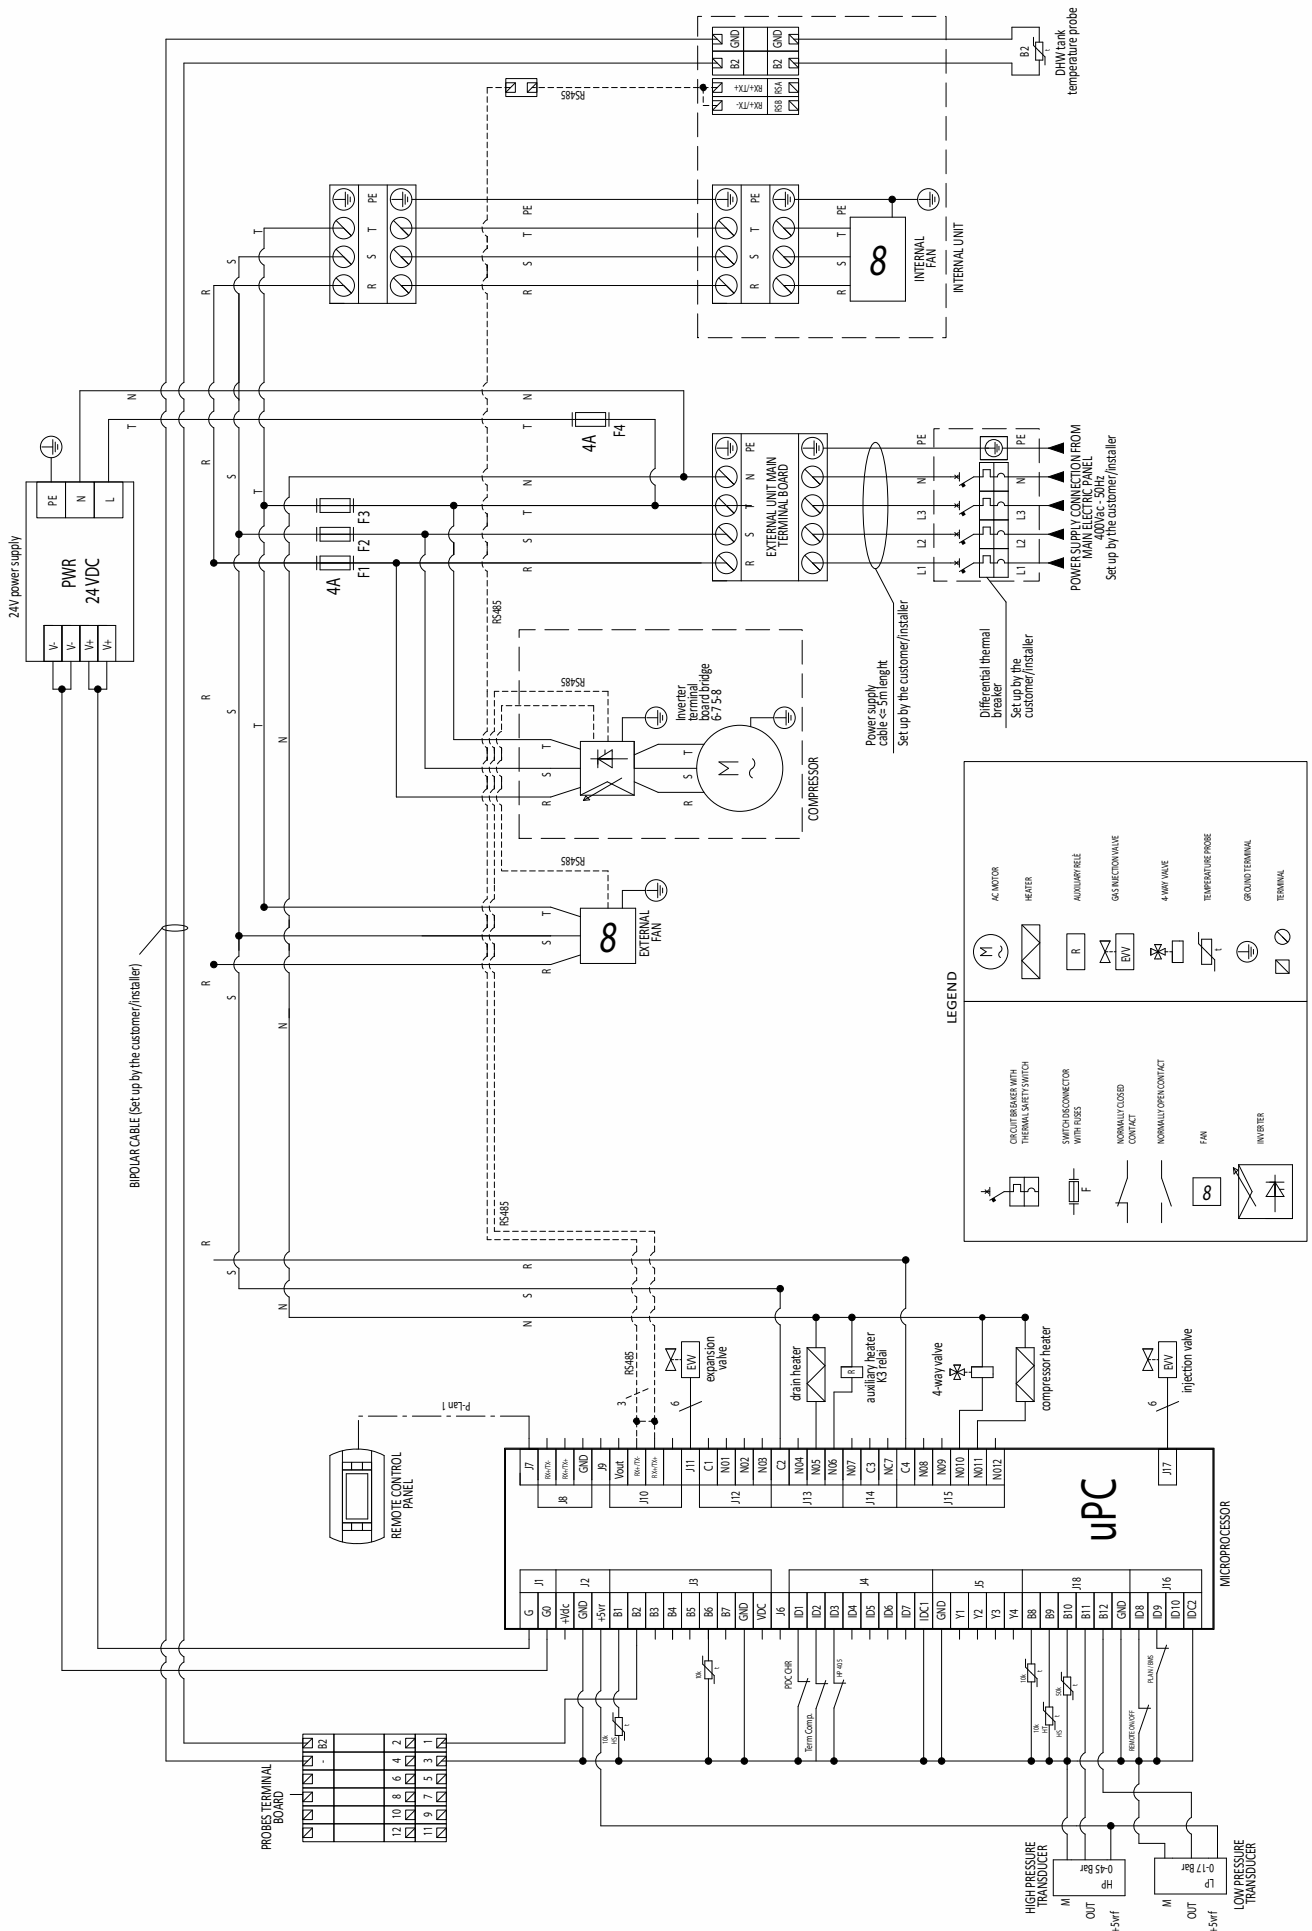


12.7 Internal unit wiring connection


12.7.1 Fan

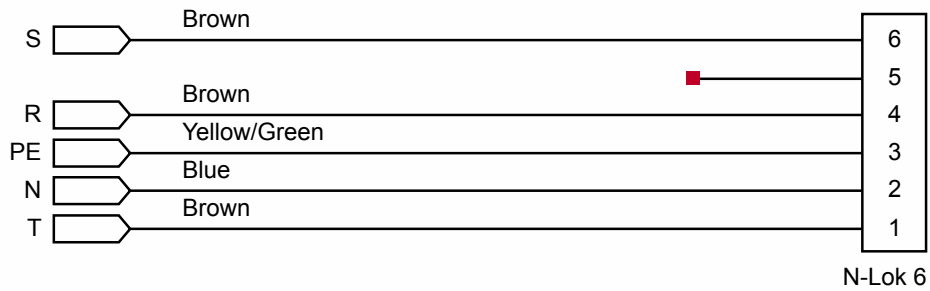


12.7.2 4-way valve and carter resistance wiring

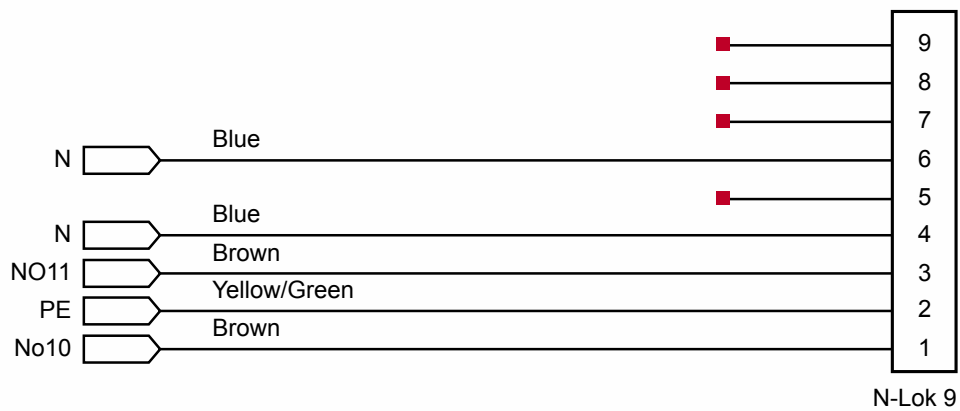

12.7.3 wiring probe

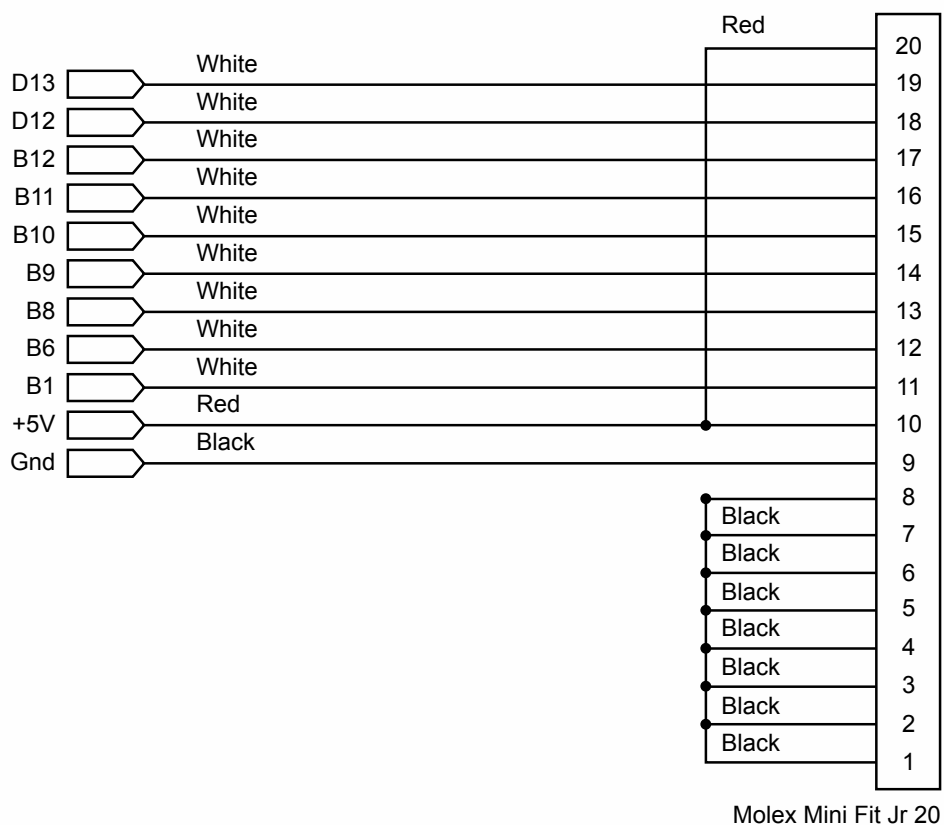


12.8 KITA AIR and AIR COLD internal unit auxiliary heating element (optional) wiring connection diagram

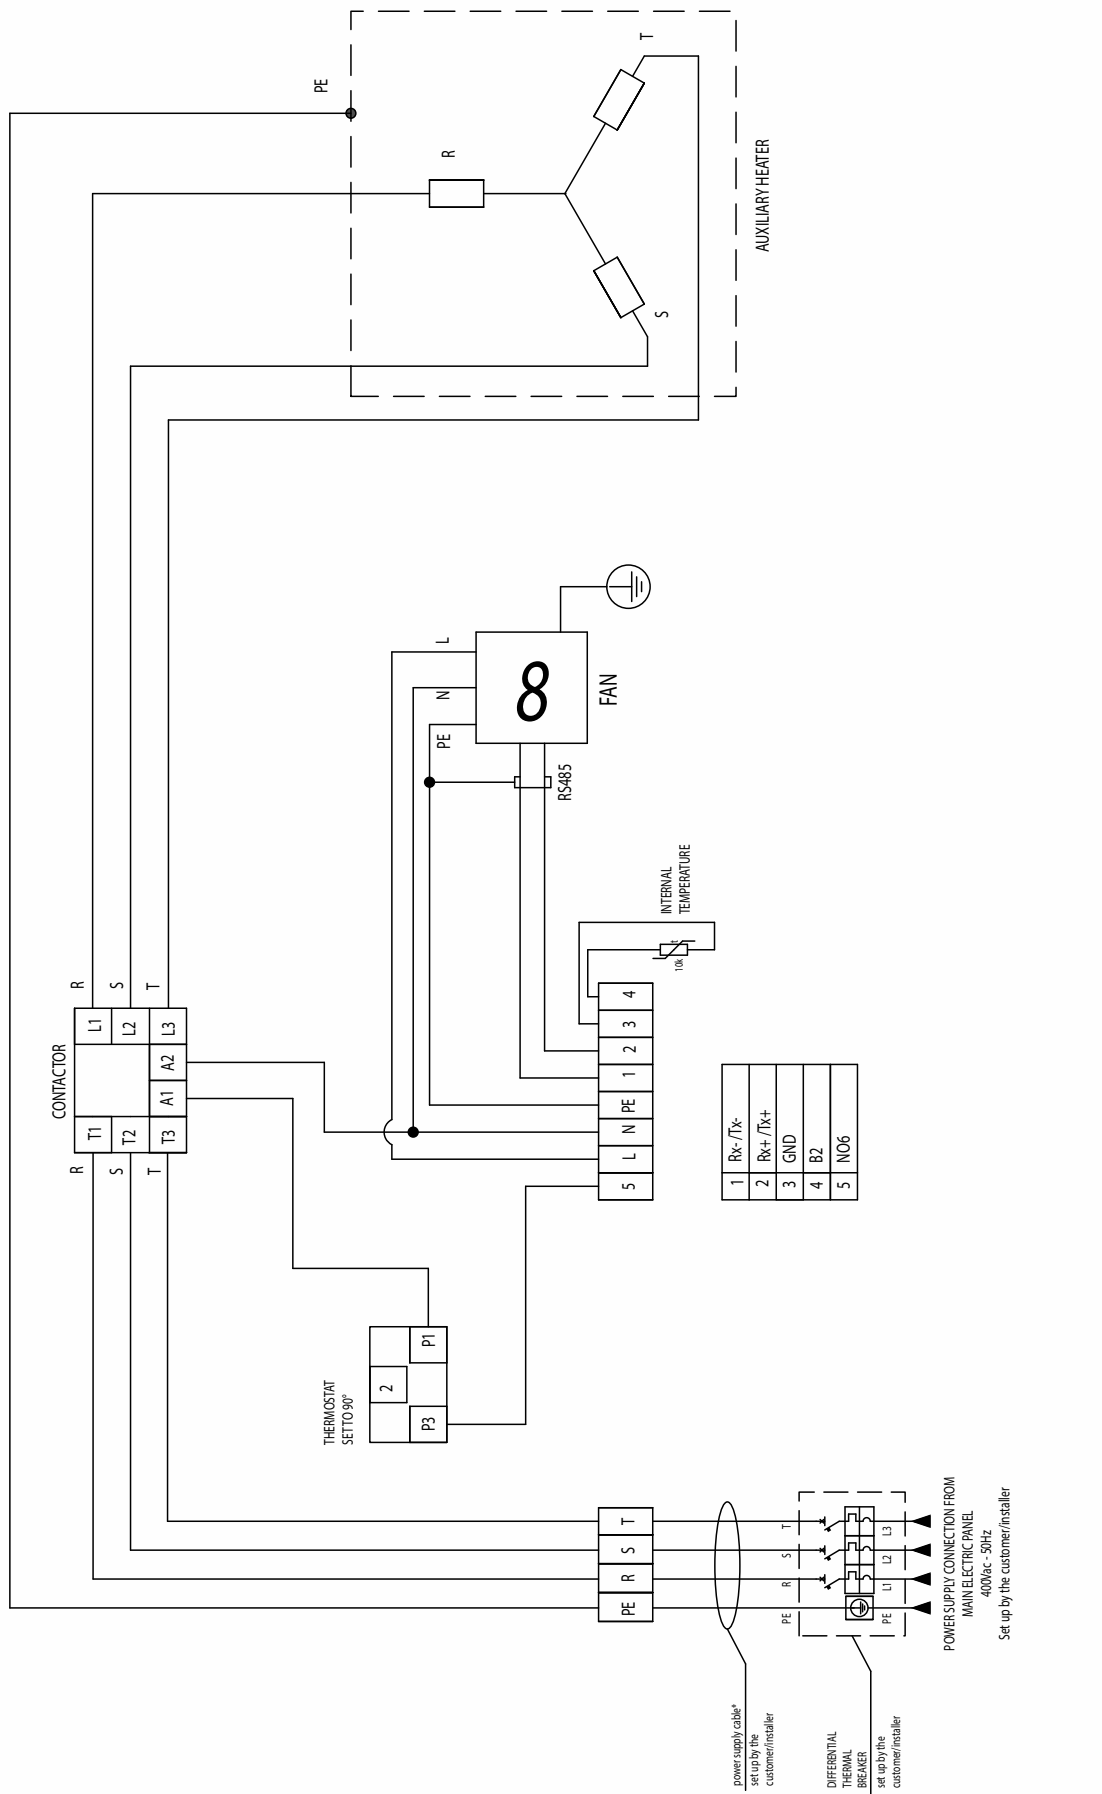

*The section of the power supply cable must be sized according to the length of the cable itself.

12.9 KITA AIR PLUS internal unit auxiliary heating element (optional) wiring connection diagram

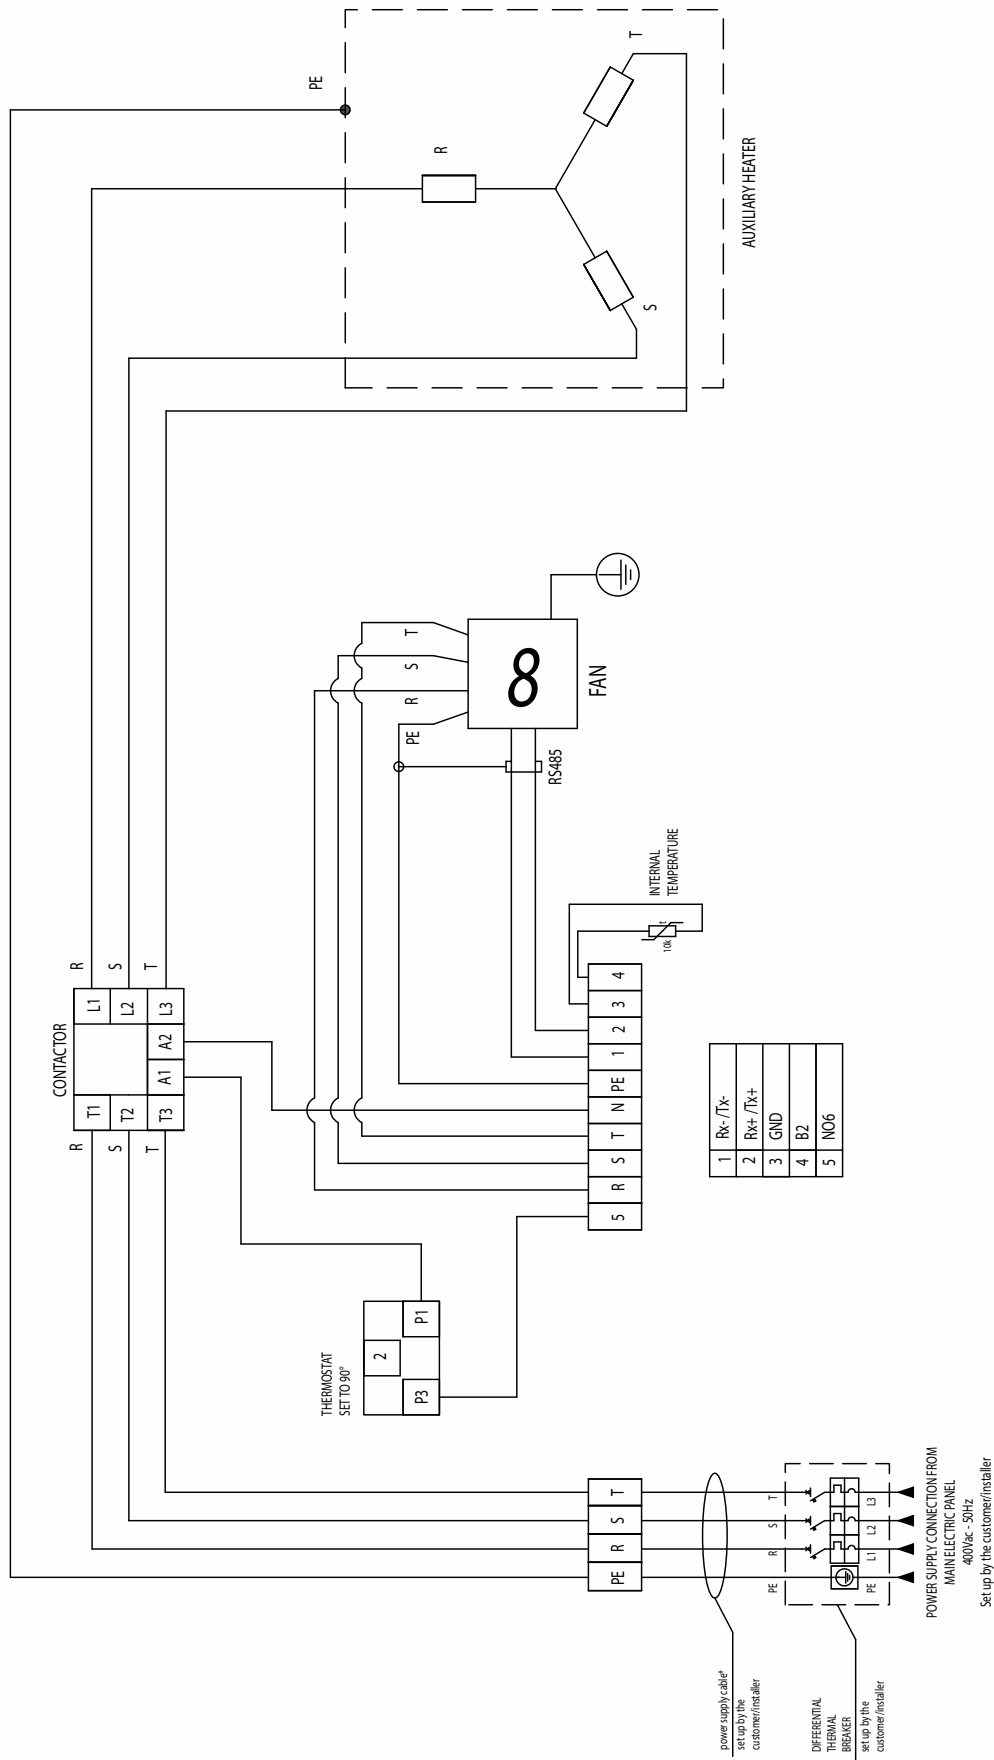

*The section of the power supply cable must be sized according to the length of the cable itself.

13 Commissioning

The plant commissioning should be realized by technical personnel that has received a complete training.

13.1 Preliminary controls

Make sure the Heat-Pump power supply cables are of a suitable section as reported in this manual, on the basis of the power used and the length of the cables themselves and that are used the necessary electrical protective devices.

Equally check the signal cables of external unit (sensors) and internal unit too, and make sure they have the required characteristics.

Refer to this manual for using the correct type of pipes (diameter / thickness) of the refrigerant circuit between the external unit and internal unit.

After checking the above steps you can turn on the power of the machine. The unit is equipped with a phase monitoring devices, so if the control panel does not turn on and the phase devices stages presents one single red LED on, then you need to disconnect power and reverse two phases of power in order to restore the correct sequence. You can then proceed with the restart.

i NOTE!

Please note that after having powered the Heat-Pump this will activate the heating of the oil automatic function (the duration of which depends on the time required to raise the temperature in the oil contained in the compressor, and then depending on the starting temperature).

i NOTE!

If the internal and external units were positioned at different heights, with a vertical drop of more than 3 meters, it is necessary to use siphons for the oil recovery every 4 meters in the cooling line called "GAS."

13.2 Commissioning

Running of the compressor:

Every HP is tested in the company before the supply, but we suggest in any case to make a short running in, so not to solicitate overly the new compressor. In this regard we suggest to let in manual the rps compressor at a medium value (50-60 rps) for one/two hours at least.

- Access to menu "Assistance": PRG --> G. Assistance --> g. Manual management --> SERVICE PASSWORD
- Screen Gg05 set up CH/HP in manual "MAN" and set up the rps (60). Now turn on the heat pump (Mode ON) and wait for some minutes until the compressor icon appears in the lower left.

Verify the proper operation:

- Access to menu "D. inputs/outputs" to control the different temperatures from sensors
- Screen D01: B1 it shows the value of liquid sub-cooling in the heat pump, it has to stay in a range between 3,5 and 5. If the hp is started up during the hot season, for the check of sub-cooling set up the fan speeds (Menu G. Assistance --> g. Manual management --> G. Assistance --> g. Manual

management --> SERVICE PASSWORD --> Screen Gg02: set up "Speed Fan" in manual MAN and "Power required" at 5%.

- Screen D08: verify that the value SH (overheating) is included between 4 and 5
- Screen D15: verify, once set these conditions the drain overheating has to be about 20. During the normal operation, with free compressor, this value can reach 45K.
- Screen D16: control the proper operation of the injection valve, considering that over 12°C external the valve is off.
- Menu G. Assistance --> g. Manual management --> G. Assistance --> g. Manual management --> SERVICE PASSWORD --> Screen Gg06: activate a defrosting forced cycle, setting up "Start the defrost cycle" in YES (once ended the cycle the function automatically come back to AUT).
- Restore all settings from manual MAN to automatic AUT.
- Verify that the working tensions and network frequencies are in the following ranges:
230/1/50 -> valori \pm 6%
400/3/50 -> valori \pm 6%

i NOTE!

A problem easily detectable is the steady opening of the electronic valve at 100%

possible reasons and solutions:

- lack of refrigerant gas in the cooling system; for this reason the electronic valve, to compensate the lack of gas, is open over the normal values.
- heat pump used in incorrect way. Example: installation of a heat pump undersized respect to the building that requires more power at rating levels. In this case for example the compressor works at 100% even with positive air temperatures; this fact requires an higher quantity of refrigerant than the project data. The heat pump Kita has to be sized to work at full speed just at minimum external temperatures. The electronic valves are optimized to work in the medium range of operation and for this reason oversized valves aren't installed, they would work too close causing instability in the system. Possible solutions:
 - control the proper operation of the valve
 - control that in the HP Kita there is the right quantity of gas
 - replace the heat pump if wrongly undersized resoect

14 K-Touch Panel

To consult when the K-Touch panel is present.

14.1 Warnings

To be able to monitor the panel remotely using a VNC program, it is necessary that the house is equipped with internet access, and that the HCC Touch panel is physically connected via a network cable to the home router or switch.

The panel comes with the "Easy Access" function already activated, which lasts for the life of the panel. This function allows, using a specific client, to remotely access the panel using a PC or a Smartphone without further configuration, only by entering the user and password of the Easy Access account. Access credentials are provided by email to the customer at the time of activation. For this reason at the time of purchase it is necessary to provide a valid email address where you will receive all useful information.

14.2 Notes on the plant preparation for K-Touch panel

NOTE!

The K-Touch panel may only be supplied with power via the internal power supply of the machine, otherwise the guarantee expires.



MODBUS cable:	Templari HCC cable (similar Belden 3105A 2x22AWG shielded)
Power cable:	2x1 mmq
Power supply:	HCC POW 24Vdc, 2.5A

Prepare the electrical system for the passage of cable ducts by at least 16 mm in diameter for the passage of only MODBUS cable and power supply for sensors and devices.

Modbus connection

WARNING!

We recommend using the HCC CABLE data cable

The connections between the BMS board mounted on the machine and the K-Touch Panel must comply with the connections shown in Tab1 and Figure 1.

The K-Touch Panel can also be connected to the P-Lan network of the μ PC as shown in Figure 6.

Connect the G (Ground) pole of the HCC Connect cable of the K-Touch Panel to the shield of the Modbus data network.

Connect the ground terminal of the power supply to the shield of the Modbus data network.

The shields of the various cable sections, between the various devices that may be present, must be connected in series and NOT inserted in the G pole of each device, as in Figure2

BMS	Data cable	K-Touch Panel	HCC FLOOR e ROOM sensors
GND	shielding socket	shielding socket	
+	A	A	A
-	B	B	B

Tab1

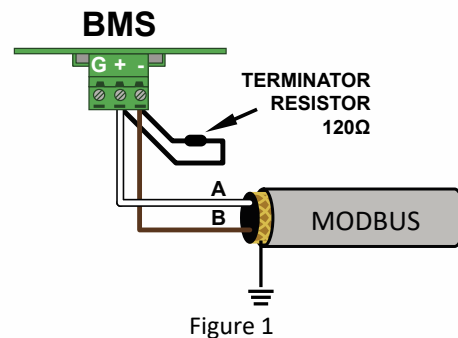


Figure 1

Installation Note:

In case there are more devices, MODBUS data cabling should *not* ever be done with direct branches that form Y or stars.

The connection between a device and the next must take place via "concatenated" connections, connecting in sequence the sensors and MODBUS devices. It is therefore convenient to prepare the fitting of cables for the passage of 2 MODBUS data cables; the first intended for the device in question and the second will be the return to connect the next device.

Each cable duct which ends on a sensor will then have at its inner 3 wirings:

2 MODBUS cables (one that comes inside plus one going out), plus one power supply consists of 2 wires 2x1

An exception is the 2-terminal devices (usually, the heat pump and the HCC panel) which instead will have a single MODBUS cable and one power supply.

- For Data cable less than 10 meters long, use only one 120 Ohm termination resistor, the one onboard the BMS or the one on the last chain peripheral.
- To use the HCC system remotely, via a VNC program, you must connect the RJ45 (LAN1) port on the back of the K-Touch Panel to a Router or Switch via an Ethernet cable.

WARNING!

The MODBUS network **must always terminate at the ends with a 120 Ω resistor, between terminals A and B.** Usually the network terminations are on the one hand the HCC panel and on the other the heat pump.

WARNING!

If the plant is designed to directly connected the heat pump to a floor system, such as underfloor heating, without intermediate systems, the absence of condensation is not guaranteed.

14.3 Connecting to the Kita heat pump

If you want to use the PGD1 remote control panel at the same time as the K-Touch Panel, you must use a **BMS** card, purchased separately. If the BMS card is present, a 120 Ω resistor must be installed at the both ends of MODBUS network. To enable the HCC to function properly, set the communication protocol to MODBUS RTU 485 via the PGD1 panel (mask Ge01).

Referring to the μ PC, make sure you **DO NOT** have the terminal ID09 connected to GND as shown in Figure 5.

With this configuration you can simultaneously use the PGD1 control panel and the K-Touch Panel.

If the K-touch panel is the only display present and it is connected to the heat pump via the P-LAN port then it is necessary that the ID9 contact of the μ PC board is connected to the Ground, as in figure 6.

14.4 System overview

This is an example of how to set up the plant.



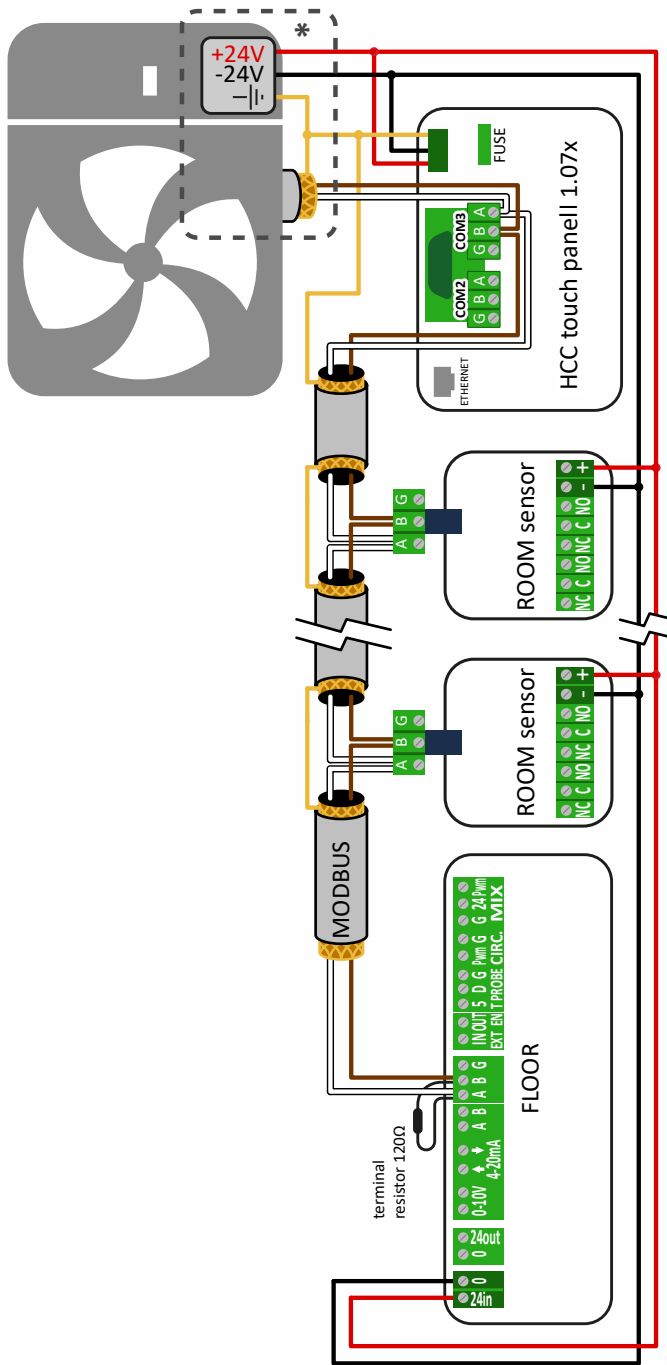


Figure 2


K-Touch panel connected via BMS

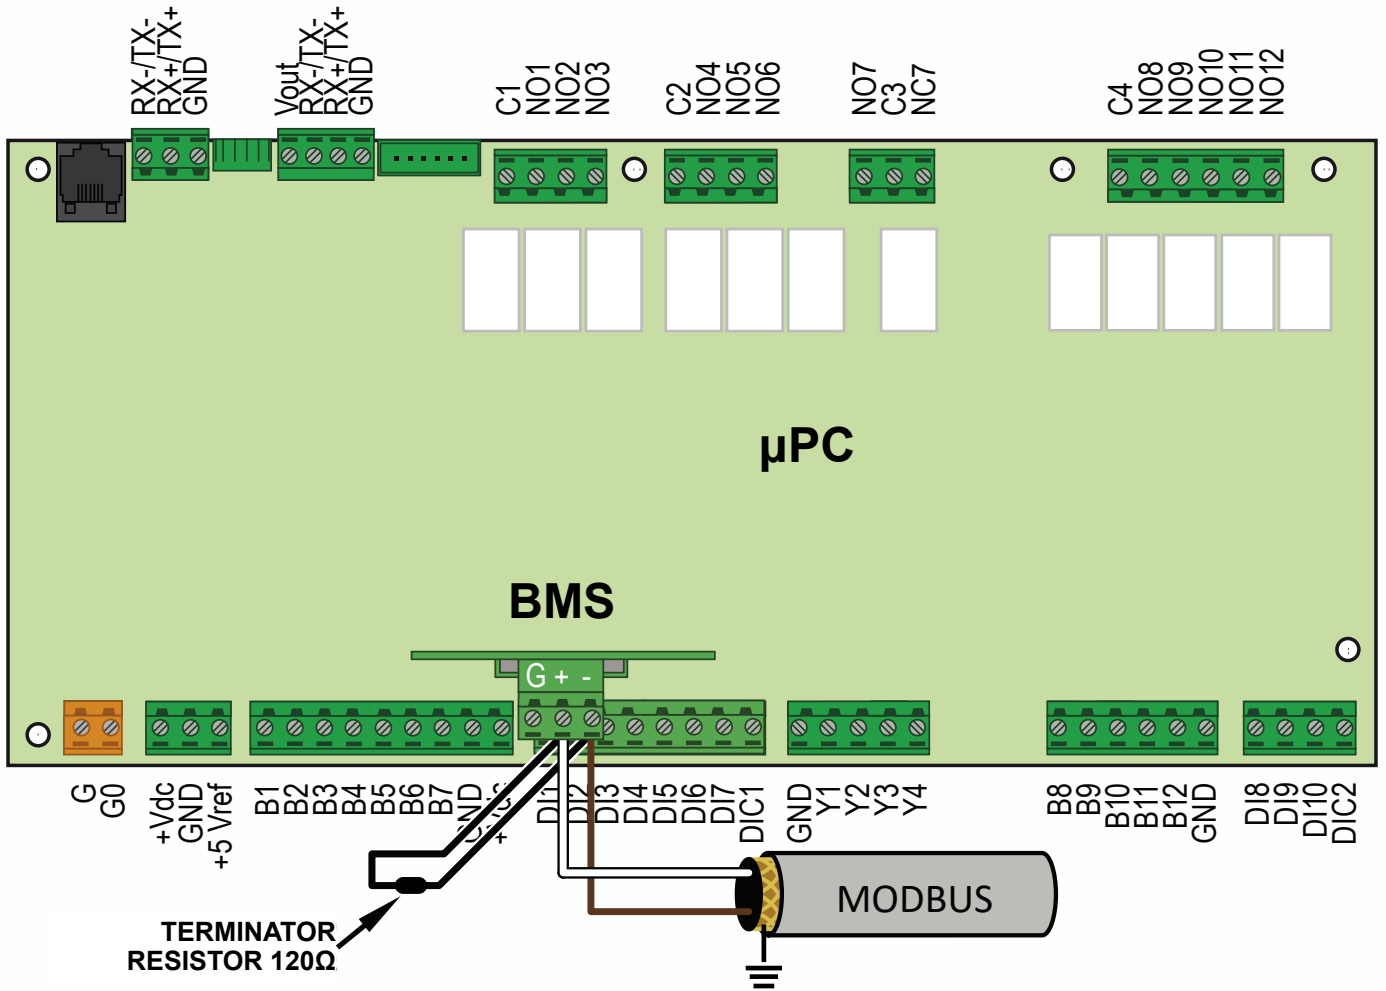

K-Touch Panel connected via P-LAN as the only display

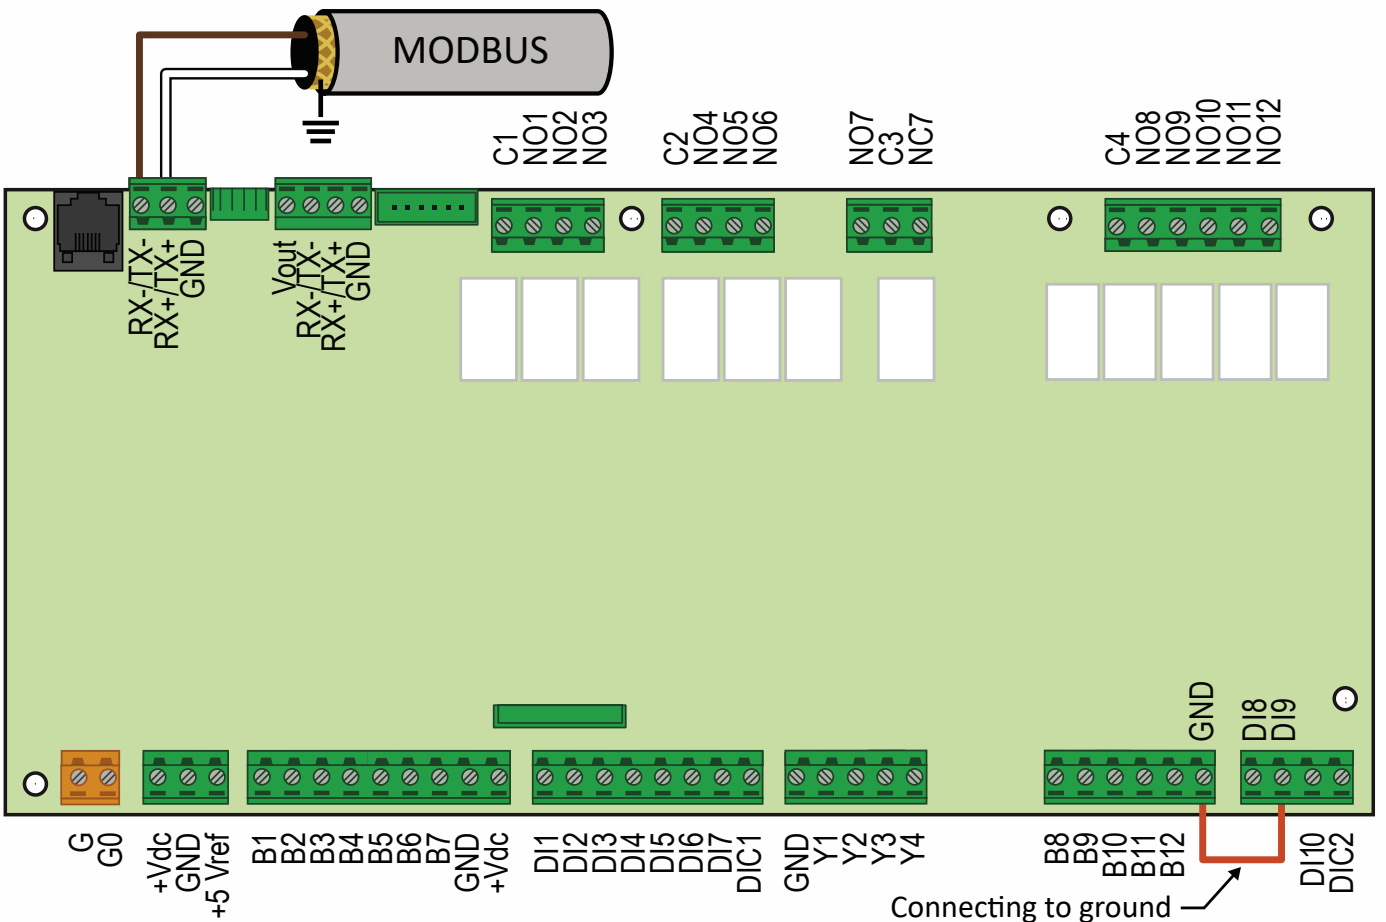

14.5 Exploded view: Plan connection (7a) or BMS connection (7b)

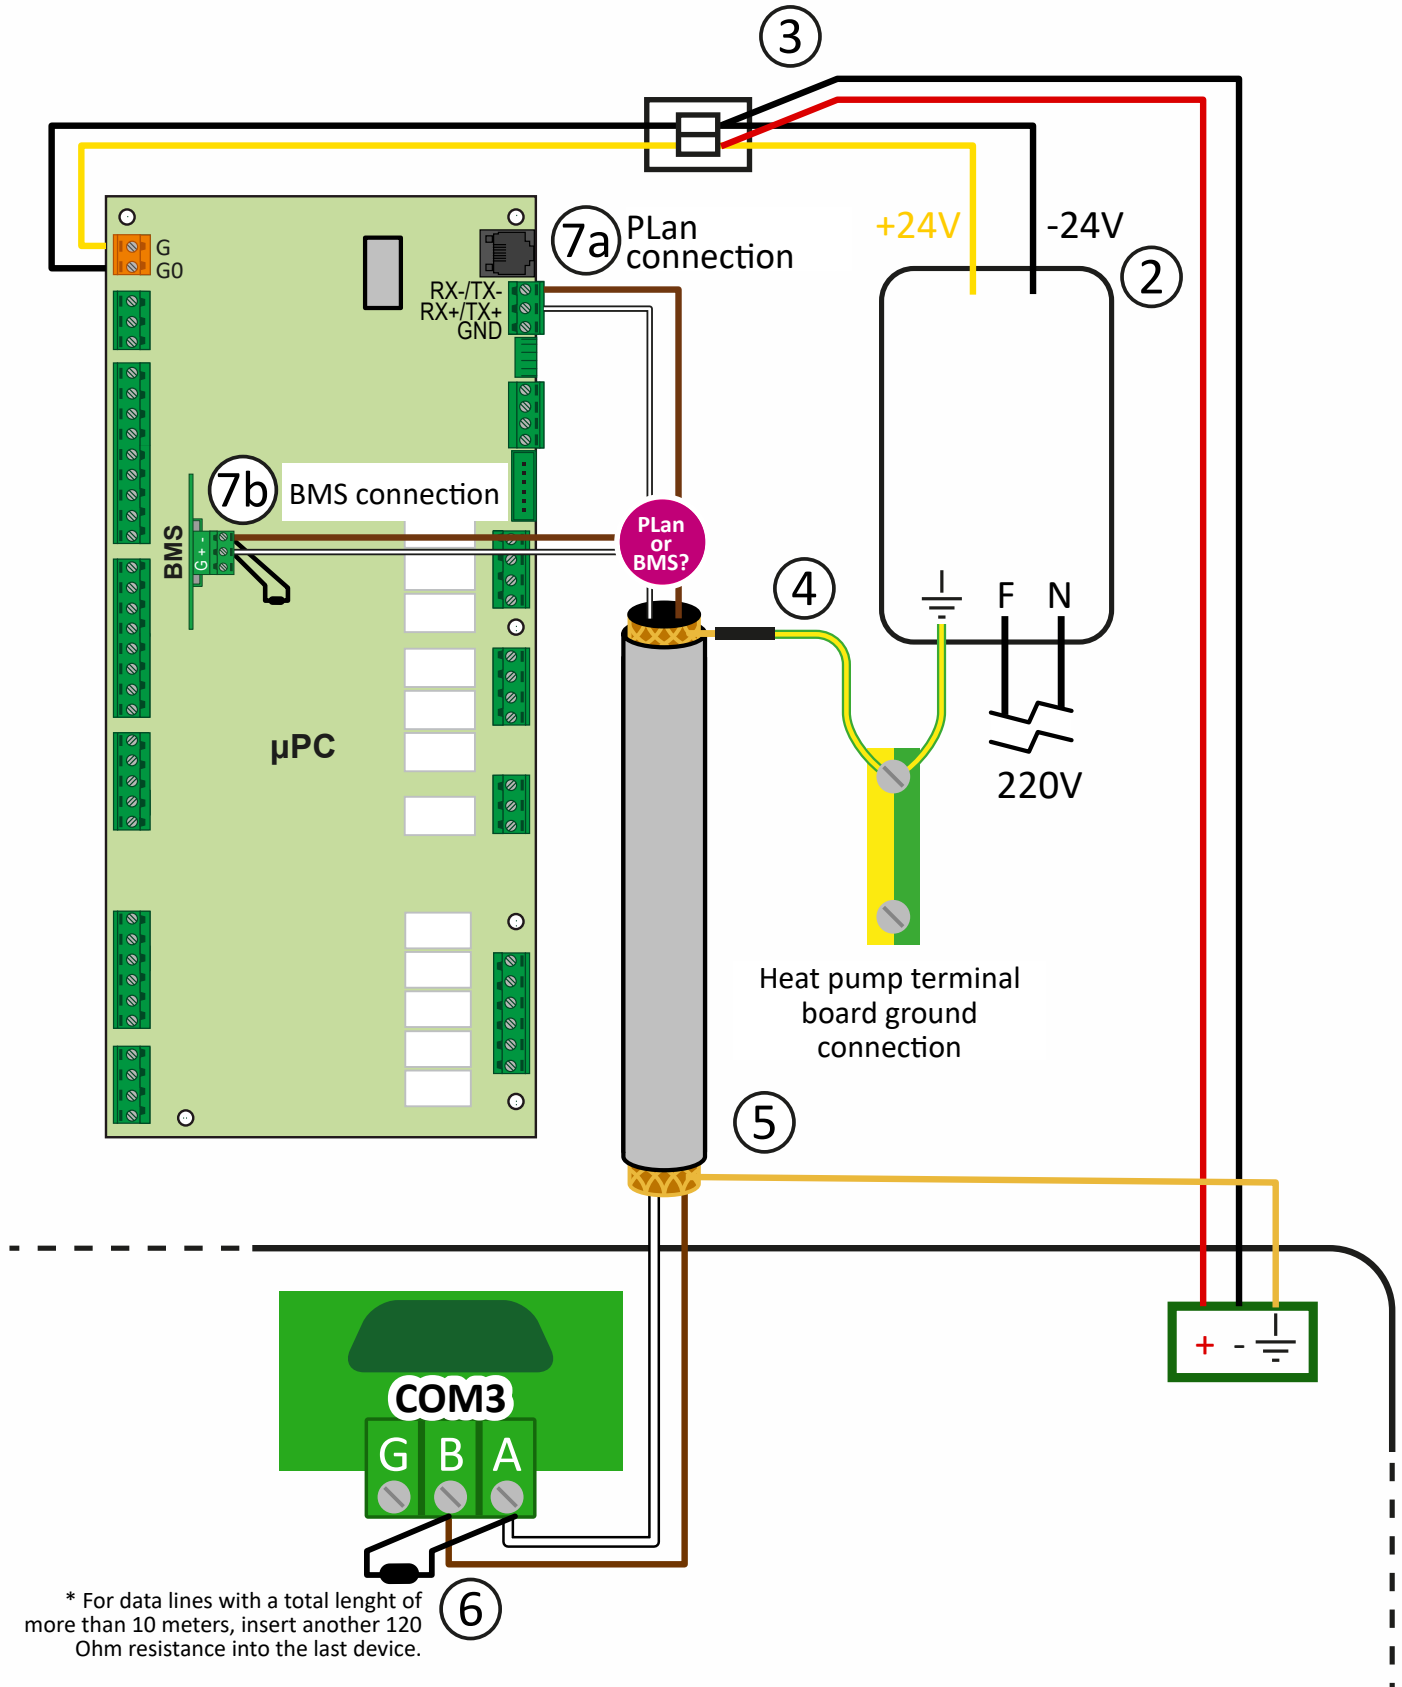

- ① Panoramic
- ② Power supply
- ③ Compact lever connector
- ④ Green/yellow shield ground connection
- ⑤ Shield
- ⑥ HCC touch panel connection
- ⑦a µPC PLan connection
- ⑦b µPC BMS connection



① Panoramic




② Power supply



③ compact lever connector



④ Green/yellow shield ground connection

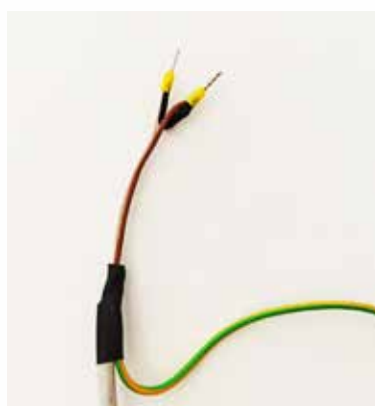


⑤ Shield



⑥ HCC touch panel connection



⑦a µPC P1an connection

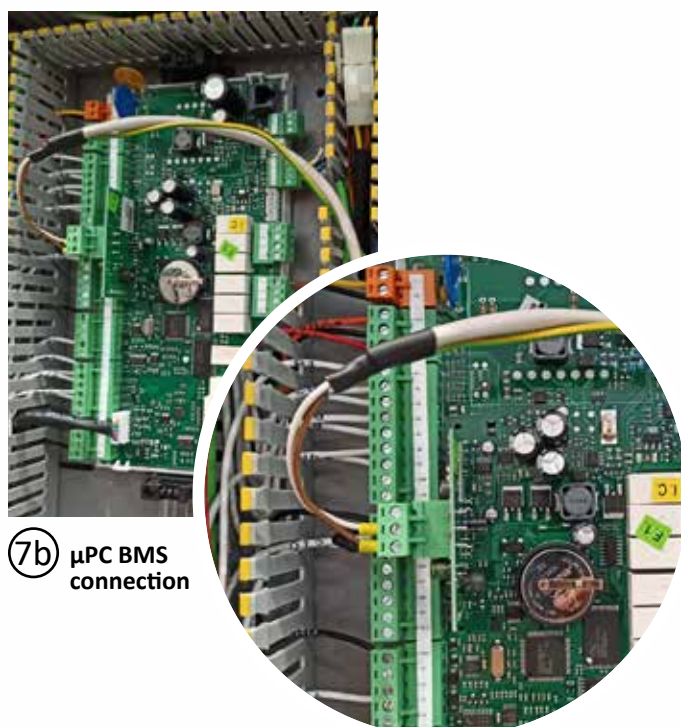

⑦b µPC BMS connection



Watch the video for the K-Touch connection to the heat pump. 7b

15 Control unit

The terminal of the unit is connected serially through line P-LAN and can be installed in remote to control the unit. In the control software have been implemented all the settings necessary to grant the functionality and the safety of the machine, and by the terminal you can monitor the operation of the unit and set the parameters of operation preference (summer/winter setpoint...). Here below some example picture will be shown to use the control and the start up of the machine.


15.1 Fixing of the panel

The panel can be fixed:

- directly on the wall through the screws and the fischer supplied with the kit (optional version supplied on demand).


To fix the panel proceed as shown:

- fix the back box (A) to the standard box or to the wall (Fig. 2);
- connect the phone cable to the panel;
- fix the front (B) to the back box (A) by the screws supplied with the kit;
- instal the snapframe (C).

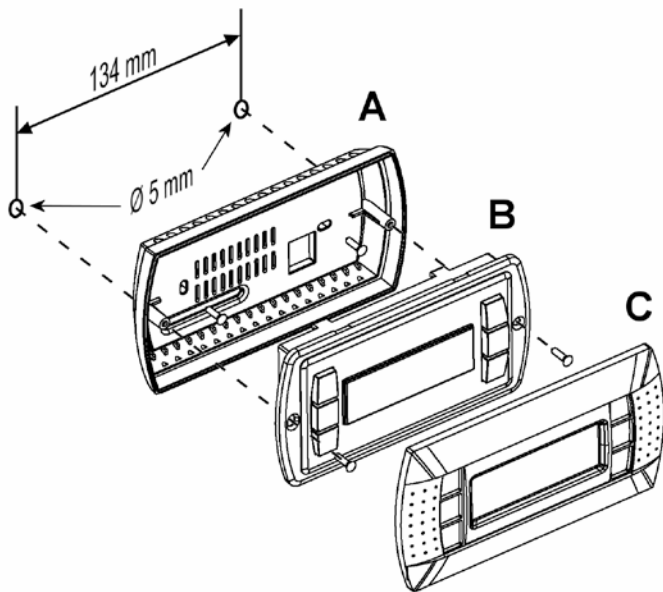


(Fig. 2)

15.2 Control panel measurement

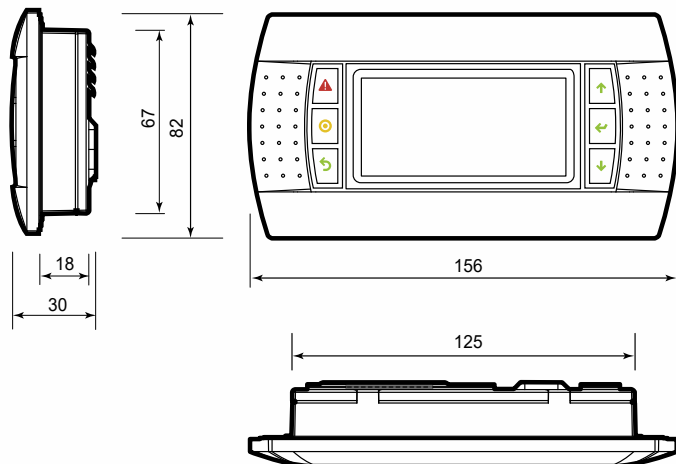


15.3 Control panel structure

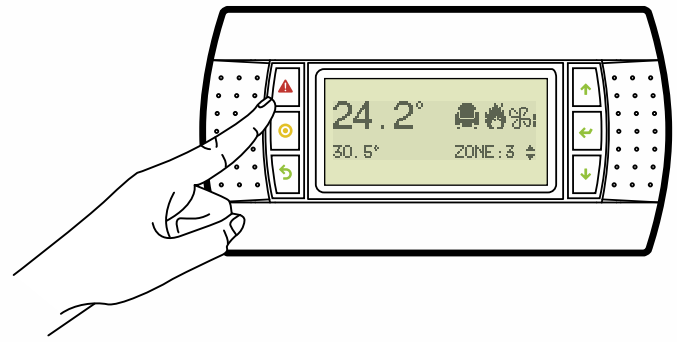

	-Alarm	Show the active alarm list.
		Allows to enter the main menu.
		Return to the previous mask
	-Up	Slide the masks upward or increase the selected parameter value.
	-Down	Slide the masks downward or decrease the selected parameter value.
	-Enter	Enter the selected submenu or confirm the selected value.

15.4 Control panel display

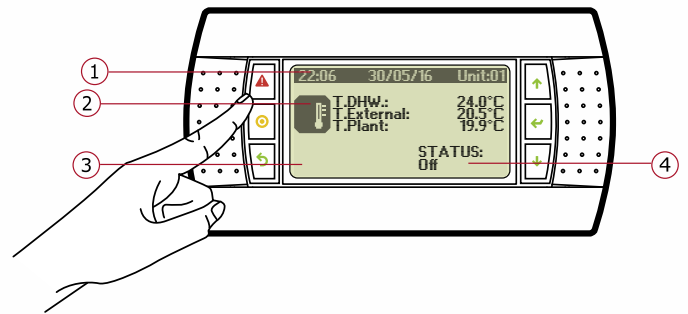

- 1 - Control panel display
- 2 - Main parameters and active request

	No active request
	Heating plant request
	Chiller plant request

- 3 - Main active actuators

	It activates with the compressor activation.
	It activates when the solar panels are installed and active
	It activates when the defrosting procedure is active

- 4 - Unit status

The unit can be in one of the following states:

- OFF
- ON
- ENERGY S.
- AUTO-OFF
- AUTO-ON
- AUTO-E.S.
- Din-OFF
- BMS-OFF
- ALARM-OFF

OFF

The unit is in stand-by status: the antifreeze function is active (internal circulating pump activation and, if requested by very low external temperatures, compressor activation), but the heating/cooling regulation is not active

ON

All the functions are activated and the unit regulates following the plant request

ENERGY S.

All the functions are activated and the unit regulated following a "lower" temperature set (it can be set up in the B02 mask, as described below). This status allows an energy saving.

AUTO-OFF

The unit regulates in accordance to the time slots set (in C02 mask), and following the nominal temperature set (B01 mask). The unit is in OFF status.

AUTO-ON

The unit regulates in accordance to the time slots set (in C02 mask), and following the nominal temperature set (B01 mask). The unit is in ON status.

AUTO-E.S.

The unit regulates in accordance to the time slots set by the customer (C02 mask) and following the Energy Saving temperature set

Din-OFF

The unit is turned off by a digital input (if expected).

BMS-OFF

The unit is turned off by a BMS supervisor (if expected).

ALARM-OFF









The unit is in OFF status due to an alarm event.

15.5 Main menu


To enter the menu press the button **Prg**.

Press the buttons **↑** and **↓** to navigate manus. At the end of operations, press **Esc** to come back to the main screen.

Here below the 8 menus:

A.		On-Off unit
B.		Setpoint
C.		Watch/Time table
D.		Inputs/Outputs
E.		Alarm history
F.		Board change
G.		Assistance
H.		Manufacturer


15.6 ON-OFF menu

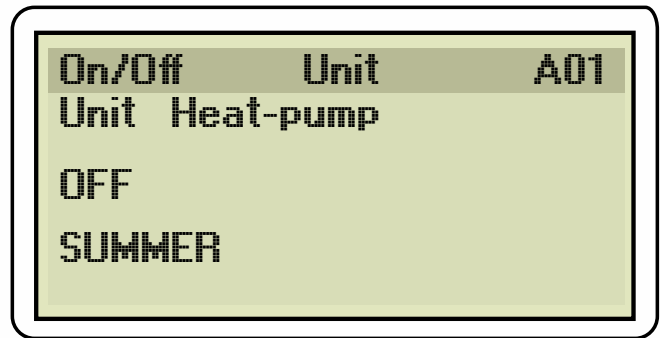

Mask A01: it permits to set the condition and the operation mode. The state OFF set in this menu is always conditioned (ex. antifreeze operation).

Mask A02: It turns off without conditions the pump for a certain period of time. Expired the time the function A01 is rehabilitate.

15.7 SETPOINT menu

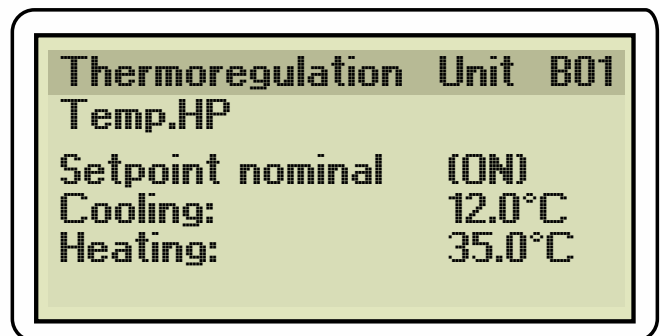

Mask B01: Variations of nominal setpoint.

Mask B02: Variations of Energy saving setpoint. We suggest the use of the Energy saving during the night or during long absences from home. To reduce the consumption of the unit we suggest to use the climatic curve instead of setting the Setpoint, because it permits a continuous flow.

Mask B05: it permits the choice of fan operation mode. It is possible to chose between the following conditions:

- **POWERFULL:** it is the most efficient condition, that also involves the noisiness of the greater fan.
- **NORMAL:** it is the condition of operation set by the manufacturer, it permits a very good compromise between efficiency and noisiness.
- **QUIET1 - QUIET2 - SILENT:** in these conditions of operation the fan is slowed down respectively of 10, 15, 20 percentage points. Those conditions permit to work with a noisiness more and more reduced. We underline that setting this function the efficiency of the machine too is progressively reduced.

Mask B06: Only in AIR version. Automatic Mode Change to pass from cooling mode to heating mode defining a confort zone in which neither mode is active. To activate the function the difference between the cooling and heating setpoint has to be equal to Delta Confort. It also allows to set the operation mode of the internal fan. The internal fan can follow the request (compressor speed) low medium or high or control the condensation.





Mask B07: it manages the Automatic End Season. You have to set the daily medium external temperature over which you want the heating function is turned off; if present the domestic function stay active in any case.

Mask B08: Optimizer management. The optimizer is an algorithm that allows to store energy using the thermal inertia of the building when the conditions are more favorable.

- **Active optimizer:** it activates or deactivates the function.
- **Final Setpoint :** it shows the reference value of the heat pump including the Delta Optimizer.
- **Delta Optimizer:** it shows the delta (positive or negative) due to optimization algorithm.
- **Influence:** it sets the minimum value (delta negative) and maximum (delta positive). This function is needed to limit the influence of optimizer if necessary.

Mask B09: it allows to set a hysteresis in shutdown. Once reached the Setpoint the machine, instead of turn off, continue operating at minimum until reaching this target on setpoint set up. If in the meanwhile the request increases again (ex. request from the domestic) the compressor come back to the operating regime required.

15.8 Clock/timetable menu

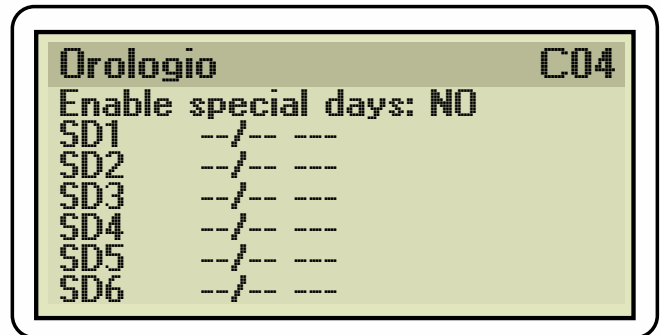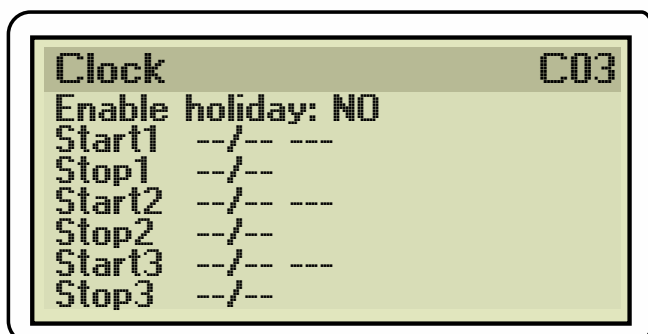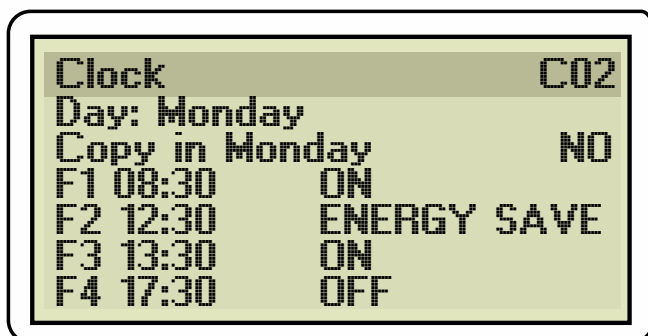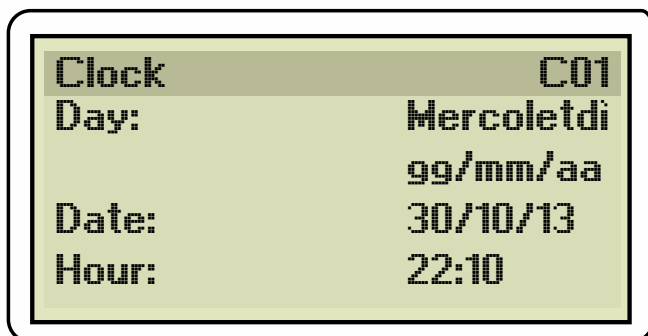

Mask C01: Date and time set up.

Mask C02: It allows to set up the timetables. To have access to timetables change set up from menu ON-OFF the conditions OFF and AUTO.

Press the button to choose the day when you want to set the timetables.

Use the buttons and to change the value displayed.

Confirm with the button .

Press twice the button to shift to the timetable setup:

- F1: it means the timetable from 00:00 of the selected day, till the time set in F1.
- F2: it means the timetable from the time selected in F1 until the time set in F2.
- F3: it means the timetable from the time set in F2 until the time set in F3.
- F4: it means the timetable from the time set in F3 until the time set in F4.

After entering the time in the first time period, confirm with to set the wanted operation mode in the time period concerned (choose between ON - OFF- ENERGY SAVE).

Confirm the choice with and proceed con with the setting of the other timetables.

To set the timetables in the other days press and proceed as explained above.

Contrary it is possible to copy the setting in different days: once entered in mask C02

- press the button to have access to the choice of the day you want to copy
- use then the buttons and to choose the day
- Confirm with the button
- With the buttons and choose the day when you want to copy the timetables
- Confirm with
- With the button choose YES and confirm with

Mask C03: It allows to enable three periods with pre-set operation.

- Press and to enable/disable the period/s.
- Confirm with to access to the starting day of the particular period.
- Use the buttons and to choose the starting day
- Confirm the choice with
- Chose the operation mode with the buttons and
- Confirm with the button
- Use the buttons and to choose the final day
- Confirm your choice with
- Repeat the same action to set if necessary the remaining periods.

Press **Esc** to come back to menu.

Mask C04: It permits to enable a pre-set operation for 6 different days maximum.


- Press and to enable/disable the special day/s

- Confirm with **←** to enter the choice of the starting day of the particular period.
- Use the buttons **↑** and **↓** to choose the starting day
- Confirm the choice with **←**
- Choose the operation mode with the buttons **↑** and **↓**
- Confirm with the button **←**
- Repeat the same actions to set if necessary the remaining particular days.

Press **Esc** to come back to the menu.

Mask C05: It enables the automatic transition from winter time to summertime. The parameters are at first set by the manufacturer.

15.9 Input/Output menu

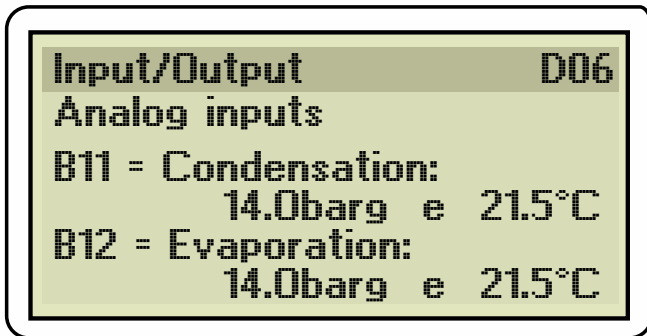

Accessing to this menu it is possible to read a lot of values. From the screen D01 to the screen D06 it is possible to read the following sensors:

- B1:** it represents the SUBCOOLING in the heat pump operation (heating). With an appropriate refrigerant charge the indicative value of B1 probe should stay between 3.5 and 5*.
- B2:** internal ambient temperature.
- B6:** compressor head temperature
- B8:** External air temperature.
- B9:** flow temperature of the compressor.
- B10:** suction temperature of the compressor.
- B11:** condensate pressure and relevant temperature.
- B12:** evaporation pressure and relevant temperature.

*If the value is very different from these parameters please contact your service centre

Mask D07: speed management of the fan.

Mask D08: view of the condition of the cooling circuit: percentage of electronic expansion valve opening, B10, B12.

Mask D09: view of working regime.

- Capacity required.
- Real capacity.
- Compressor speed.
- Waiting time ON: minimum time elapsing between a shutdown and the other, or time necessary to equalize the pressure of high and low to the right starting value.

Mask D10: it is show the working zone in the envelope and alarm count down "out of envelope".

Mask D11: it displays information about pressures.

- difference between pressure of high and low
- relation between pressure of high and low
- alarm count down "delta P low"

Mask D14: shown the temperature of compressor drain and relevant condition and envelope zone.

Mask D15: overheating of compressor drain and relevant control type active.

- SSH = Suction Super Heating
- DSH = Discharge Super Heating

Mask D19: Parameters Inverter/Engine


Mask D20: Parameters Inverter/Engine

Mask D21: Parameters Inverter/Engine

Masks D30, D31: masks relevant to the external battery fan. You can find the rpm and instantaneous power absorbed.

Mask D33: summary of the unit parameters

15.10 Alarms history menu

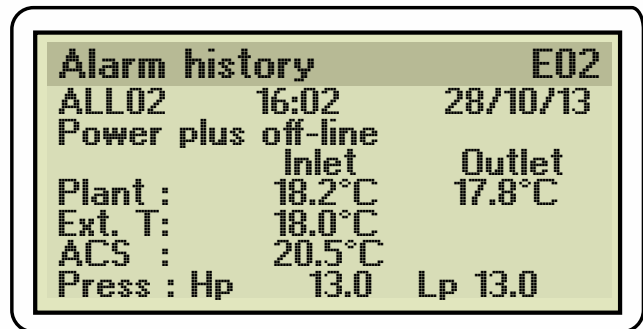

In this menu it is possible to display the alarms due to a possible protection intervention. The alarm list is in the chapter 13.

15.11 Board change menu

The board change menu allows to display the other heat pump/s when they are connected in pLAN and the settings of electronic board/panel allow it.

15.12 Assistance menu

The Assistance menu presents a submenu structured as follows:

- Language change
- Information
- Input / output assistance
- Hours worked
- Config. BMS
- Param. Assistance
- Manual management

A. LANGUAGE CHANGE

This menu allows the language change, if available.

Mask Ga01

Possible language: Italian, English, German e French.

B. INFORMATION*

This menu contains masks where there are relevant information to the software, to the control board, to the valves and the inverter, reserved to the technical assistance.

C. INPUT / OUTPUT ASSISTANCE

This menu contains masks of input and output reserved to the technical assistance.

Gc16: it displays in steps and percentage the injection valve opening.

Gc17: inverter status.

Gc18: inverter status.

Gc22: inverter status.

Gc23:	inverter status.
Gc24:	digital inputs
Gc25:	digital inputs
Gc26:	digital inputs
Gc27:	digital outputs
Gc29:	digital outputs
Gc32:	fan status

D. WORKED HOURS

This menu allows to monitor the working time

Mask Gd01: In this mask operation total hours of the heat pump are displayed.

Mask Gd02: In this mask it is displayed the number of defrost made by the machine during the operation in heat pump.

E . CONFIGURATION BMS

This menu allows to set the communication protocol of the port "BMS" of the electronic control. This menu is protected by a password. Only the authorized staff can enter it.

F . ASSISTANCE PARAMETER

This menu is protected by a password. Only the authorized staff can enter it.

- Counter settings
- Sensors calibration
- Thermoregulation
- default user / change password

a. COUNTER SETTINGS

Reserved to the authorized staff

b. SENSORS CALIBRATION

Gfb01: sensor calibration B1 and B2

Gfb02: sensor calibration B3 and B4

Gfb03: sensor calibration B5 and B6

Gfb04: sensor calibration B7 and B8

For the sensor B8 it is also possible to choose:

- on board:** the sensor on board is set
- remote:** remote sensor is set

Gfb05: sensor calibration B9 and B10

Gfb06: sensor calibration B11 and B12

Gfb07: offset S1, S2

Gfb08: offset S3, S4

Gfb09: enable and set sensor calibration B2 and B3

c. THERMOREGULATION

Mask Gfc02: Configuration request integration parameters.

It allows to define the thresholds of auxiliary integration intervention (boiler / electric heater) to the heating based on the request (the ability to reach the set point in a given time interval) and on its proportional part.

It is defined the working condition to which the heat pump requires help from the integration, namely the condition of "crisis".

- ON-Request:** it represents the request generated by PID of the reached water that activate the integration.
- ON-Propor.:** it represents the distance from the set, in percentage, over that activate auxiliary integration.

For example: the percentage of the proportional band Hc06 as per factory default is set at 10. The 60% of 10 is 6°C . It represents the proportional enabling the integration of auxiliary heating. Higher this value is it means the machine is far from set. If this value was low

and the previous higher, the boiler could start even if it isn't necessary, for example if the machine stayed near the set (low proportional) for long time (high integral pushing), no reaching it. In qthis case the machine would be a little subsized but it could heat the water in any case, without a necessary intervention of the boiler.

The combination of the two previous parameters, then, identifies when the machine is really in crisis and needs integration. Happening both conditions the integration is active.

- OFF-Propor.:** it's the percentage of the proportional band Hc06, that as default is set at 10, under that the integration shut down.
- OFF-Diff.:** Degrees the integration has to produce more on Setpoint set on the heat pump.

Mask Gfc03: integration activation in case of need (heat pump in "crisis").

- Setpoint act.:** external temperature value under that the boiler is enabled to start if the machine is considered in crisis (parameters in Gfc02)
- Differential:** deltaT positive, that is the integration is enabled until the external temperature reaches a temperature equal to Setpoint+Differential.
- Boiler activation delay:** verify previous conditions, the boiler is activated if they stay for the time set.

Mask Gfc04: integration activated according to the outside temperature.

In this case the integration started when the outside air temperature falls below the set value. Once activated the auxiliary source, it works in conjunction with a heat pump, unless it is not been set her to turn off.

Integration remains active until it reaches the set water setpoint, although the air temperature rises above the value set.

- Setpoint act.:** external temperature value that enable the heating control, heating independent from other factors
- Differential:** deltaT positive, that is the integration is enabled until the external temperature reaches a value equal to Setpoint+Differential.
- Turn off compressors:** it allows to turn off the heat pump under the defined temperature in Setpoint act. : the integrated system totally replaces the heat pump.

Mask Gfc07: reserved

Maschera Gfc15: reset antifreeze alarm.

- Reset antifreeze alarm primary circuit:** it allows to establish if the rearming is manual or automatic.
- Manual:** (default) the machine restarts only if the user resets resetta manually the alarm.
- Auto:** the machine restarts automatically when the flow temperature is increased to the value Set_alarm_antifreeze + Diff_Activat

Mask Gfc20: resetting set overheating reset .

- Reset overheat. alarm primary circuit:** it permits to establish if the resetting is manual or automatic.

- **Manual:** (default) the machine restarts only if the user resets the alarm manually.
- **Auto:** the machine restart automatically when the flow temperature is decreased to the value Set_alarm_overheat-Diff_Activat.

Mask Gfc21: selection for the setting of the mode (winter or summer) through user panel or remote external switch (digital).

- **Summer/Winter selec. Season from:** it is possible to choose between "KEYBOARD" (operator panel) or "IN. DIG. 1" . In this case you have to consider it isn't enough to manage the commutation summer/winter.

Mask Gfc22:

- **Enable protection:** it allow to enable or not the function winter antifreeze protection that activates the compressors when the plate heat exchanger reaches a temperature too low.

Mask Gfc23: enabling external reports

- **It enable warning reports on output NO7:** it allows to enable the digital output NO7, to whom it could be connected for example a notification led, when the machine is in alarm for minor causes.

Mask Gfc25: defrosting setting.

- **Fan consumption:** fan consumption in Watt calculated by the electronic and used to start the defrosting procedure.
- **Start up delay:** start up delay of the compressor after that it is allowed the defrosting start up. To avoid that the defrost starts just after the ignition of the compressor, situation where you can have the conditions of the defrost start up, due to the start up dynamics.
- **Fan delay:** waiting time before of starting the defrost
- **Defrost delay with temperature differencies:** Waiting time for the activation of the defrost for delta T.

Mask Gfc27: parameters defrost.

- **En oil defrost:** element that allows to enable the returno of the oil through defrost cycle. If enabled and if the unit required the return of the oil normal defrost procedure is activated with maximum settable speed with the following parameter "Defrost Speed".
- **Low speed defrost:** if ate the moment of defrost start up the compressr had a lower speed than the Thershold the compressor speed during the defrost will be defrost speed.

Mask Gfc34: drip parameters.

- **Drip manag.:** it enables the operation of the fan before the inversion of the 4-way in output from the defrost cycle, that rotating at a high rpm promotes the disposal of the water drops still in the battery.
- **Fan Dripping Speed:** it is the speed where the fan is forced il ventilatore in this specific phase of the defrost process.
- **Fan reverse Dir:** it allows to enable or not the reversing of the rotation direction of the fan. If enabled, the dripping is made with a fan that turns in the opposite.

Mask Gfc37: defrost parameters.

- **Integration of the system during the defrosting.:** It enables the integration generator to the system (boiler or electric resistance).
- **Def. end max time exceeded:** it allows to choose between HISTORY and HISTORY+ALARM, that is to choose the registration/reporting mode of the event "the defrosting is finished because the maximum time is exceeded".

Mask Gfc50: It allows to enable the condensate drain in fix or intermittent mode in base on the external temperature.

- **Res.drain cond.:** it enables the activation of the resistance for the condensate drain.
 - **ALWAYS ON (Set1):** in this condition, the resistance is always active under this parameter
 - **Set:** value of temperature reached that the resistance condensate drain is always active.
 - **Diff:** differential of temperature. When the xternal temperature is equal to Text= Set+Diff you go out form this function
- **MODE ON-OFF (Set2):** in this condition the resistance is activated under the set, at time intervals as defined from the following parameters.
 - **Set:** value of temperature reached that the function is activated.
 - **Diff:** differential of temperature. When the external temperature is equal to Text= Set+Diff you go out from this function
 - **T.On:** time of on of the resistance in minutes.
 - **T.Off:** time of off of the rsistance in minutes.

Mask Gfc51: limitation in power consumption.

- **En.Watt limit rps:** Enabling of maximum allowed speed limitation to compressor for work of the effective consumption in watt.
- **Thr.:** maximum threshold reachable by the total consumption (compressor, fan, auxiliary, circulator, auxiliary...)
- **Band:** Band in which the value of instant consumption can swing, but always staying under the threshold set
- **Fan:** Consumption value read by the fan. The reading is possible only thanks to the protocol od communication modbus (protocol to communicate) RS 485 (physic network constituted by a certain number of wires), it is set in one to read the effective consumption value
- **Aux:** Consumption values of the auxiliaries. Set equal to 20 W costant.
- **Update time:** interval of time passed that you have the update, up or down, if all the conditions allow it, the variable that contains the maximum speed allowed by the compoessor.
- **Update rps:** positive or negative increasing of the variable that contains the maximum speed available by the compressor.

Operation:

- if Thr is< the current consumption of the unit

the limitation of the maximum rpm of the compressor starts decreasing of "Update rps" every "Update time"

- if the current consumption is included between (Thr-Band) and Thr correction actions aren't made
- if the current consumption is < than (Thr-Band) the compressor is free from binds (the maximum speed allowed can increase)

Mask Gfc56: it allows to change the intervention threshold of defrosting.

- **Model:** fan model present in the heat pump.
- **Amp:** parameterization defrost.

d. DEFAULT USER / CHANGE PASSWORD

Mask Gfd01: it allows to change the password of the access to assistance menu.

- **Cancel history alarms:** it cancels completely the history of the alarms.
- **Insert a new password:** it allows to replace the password of the access to the assistance menu

G . MANUAL MANAGEMENT

This menu is protected by a password. Only the authorized staff can have access.

Mask Gg01: It allows to force in manual (MAN) some digital outputs so to verify the correct electrical connections. Refers to the guide supplied with the unit for possible other digital outputs presents

- **N05:** it allows to activate the condensate drain heater.

Mask Gg02: it allows to force the fan at the wanted speed, selectable by required power.

- **Fans speed:** it activates the manual management of fans speed.
- **power required:** % active if manual management is enabled.

Mask Gg03: manual or automatic management of the expansion valve.

- **It enables valve manual position:** it enables the manual management.
- **Valve manual position:** if the manual management is activated, it shows the opening of the valve measured in steps. **USE EXTREMELY CAREFULLY, CONTRARY THE COMPRESSOR CAN BREAKS AND THE GUARANTEE EXPIRES.**

Mask Gg04: injection valve manual or automatic management.

- **It enables valve manual position:** it enables the manual management.
- **Manual valve position:** if the manual management is active, it shows the valve opening in steps.

Mask Gg05: manual or automatic management of the heat pump.

- **CH/HP Request:** it enables speed manual management of compressor for the heat pump in heating and cooling.
- **speed:** if the manual management is active, it shows the compressor speed for the heat pump

Mask Gg06: it enables the defrosting cycle.

- **It enables the defrosting cycle:** it enables a defrosting cycle.

Mask Gg07: management of oil recover

- **It enables oil forcing:** it enables a forcing in oil recover

cycling.

Mask Gg08: integration management.

- **N06 Plant Integr.:** auxiliary heater output (es. boiler).

Mask Gg09: only in AIR version. Management of winter fan.

- **Fan speed:** it enables the manual management of fan speed.
- **Power required:** % active if it is enabled in manual management.


Mask Gg10: this mask allows to manage screed dryer function.

- **Start cycle:** set the function ON or OFF.
- **Elapsed time:** It shows the elapsed time after the activation of the function.
- **Start temperature:** the starting temperature of the function.
- **Target temperature:** the target temperature of the function. The temperature increases linearly.
- **Raise hours:** the amount of hours the function must use to raise from starting temperature to target temperature.
- **Stabilise hours:** the amount of hours the function must stay in target temperature.
- **Cool down:** the amount of hours the function must use to cool down from target temperature to start temperature.

Mask Gg11: this mask allows to ignore the oil temperature control of the compressor.

Maschera Gg12 initialization: this mask is used to initialize the heat pump. The initialization erases all data previously saved in the heat pump.

15.12 Menu overview

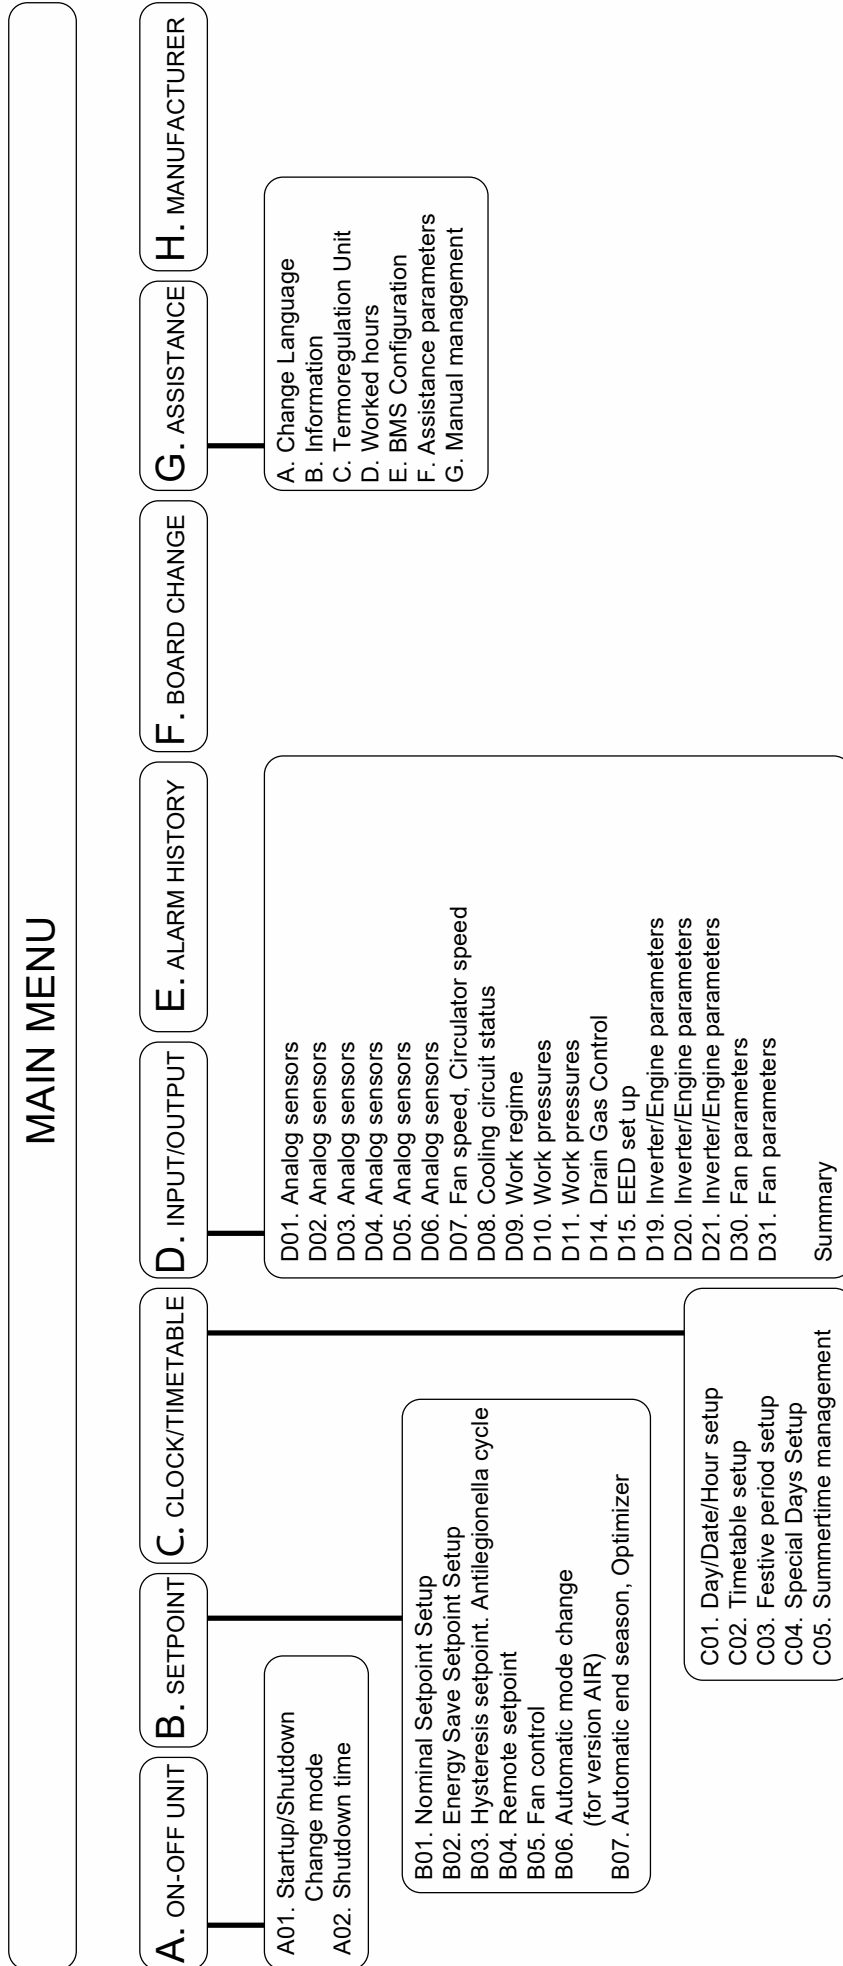

16 Alarms

Alarm code	Visualized message	Reset	Delay	Relay	Action
ALA01	Probe B1 broken or disconnected	Automatic	60 sec	Yes	Stop the machine
ALA02	Probe B2 broken or disconnected	Automatic	60 sec	Yes	If there is a geothermal modulating pump it is set at the maximum speed
ALA03	Probe B3 broken or disconnected	Automatic	60 sec	Yes	Stop the regulation of the domestic circuit
ALA04	Probe B4 broken or disconnected	Automatic	60 sec	Yes	Stop the machine
ALA05	Probe B5 broken or disconnected	Automatic	60 sec	Yes	Stop the pump of the solar collector
ALA06	Probe B6 broken or disconnected	Automatic	60 sec	Yes	Stop the functions enabled by the outside probe
ALA07	Probe B7 broken or disconnected	Automatic	60 sec	Yes	Stop the machine
ALA08	Probe B8 broken or disconnected	Automatic	60 sec	Yes	Stop the pump of the solar collector
ALA09	Probe B9 broken or disconnected	Automatic	60 sec	Yes	If Siam compressor stops the compr.
ALA10	Probe B10 broken or disconnected	Automatic	60 sec	Yes	If there is the electronic expansion valve it stops the machine
ALA11	Probe B11 broken or disconnected	Automatic	60 sec	Yes	Stop the machine
ALA12	Probe B12 broken or disconnected	Automatic	60 sec	Yes	Stop the machine
ALB01	Position: ID3 High pressure	Manual	Immediate	Yes	Stop the machine
ALB02	High pressure of the compressor 1 from transducer	Manual	Immediate	Yes	Stop the machine
ALB03	Low pressure of the compressor/s from transducer	Automatic (par. Hc05)	At the start: 40s (par. Hc03) at regime: 10s (par. Hc04)	Yes	Stop the machine
ALC01	Position: ID2 Thermal compressor 1 or allarm inverter	Manual	Immediate	Yes	If 1 comp. enabled: stop the machine If 2 comp. enabled: stop comp.1 (if comp. 2 is available)
ALC02	Position: ID9 Thermal compressor 2	Manual	Immediate	Yes	Stop comp.2 (if comp. 1 is available)
ALC03	Alarm envelope: 0: Max.rel.compr. 1: Max.press.drain 2: Power limit 3: Max.press.suc. 4: Min.rel.compr. 5: Min.diff.pressure. 6: Min.press.drain 7: Min. press.suc. Compressor off for working out of envelope (only with compressor Siam)	Manual	60 sec (par. H1b14)	Yes	Stop the compressor
ALC04	Alarms missing start of the compressor (only with compressor Siam)	After 5 times per hour it becomes manual	60 sec (par. H1b11)	Yes	Stop the compressor
ALC05	Max.drain time (only with compressor Siam)	After 3 times per hour it becomes manual	Immediate	Yes	Stop the compressor
ALC06	Delta pressure < minimum request for the return of the compr. oil (only with compressor Siam)	Automatic	120 sec (par. H1b12)	Yes	Stop the compressor

Alarm code	Visualized message	Reset	Delay	Relay	Action
ALP01	Position: ID1 Flow switch geothermal circ. water	After 5 times per hour it becomes manual	At the start: 15s (par. Hc15) at regime: 5s (par. Hc16)	Yes	Stop the machine at maximum time reached
ALP02	Position: ID4 Thermal pumps	Manual	Immediate	Yes	Stop the machine
ALP03	Positions: ID10 Flow switch primary circuit water	After 5 times per hour it becomes manual	At the start: 15s (par. Hc12) at regime: 5s (par. Hc13)	Yes	Stop the machine at maximum time reached
ALP04	Position: ID5 Thermal pump solar circuit	Manual	Immediate	Habilitable (Gfc01)	Stop the pump of solar collector
ALR01	Position: ID7 Alarm boiler/ resistance integr. system	Automatic	Immediate	Habilitable (Gfc02)	Stop boiler/ resistance operation primary circuit integration
ALR02	Position: ID6 Thermic boiler/resistance DHW from digital input	Manual	Immediate	Settable (Gfc03)	Stop operation boiler/resistance integration DHW
ALF01	Position: ID1 Thermic fan	Manual	Immediate		Stop the machine
ALT01	Threshold reached worked hours by the compressor 1	Manual	Immediate	Settable (Gfa01)	Only signal
ALT02	Threshold reached worked hours by the compressor 2	Manual	Immediate	Settable (Gfa01)	Only signal
ALT03	Threshold reached worked hours by the geothermal pump	Manual	Immediate	Settable (Gfa01)	Only signal
ALT04	Threshold reached worked hours by primary circ. pump	Manual	Immediate	Settable (Gfa01)	Only signal
ALT05	Reached threshold worked hours pump DHW	Manual	Immediate	Settable (Gfa01)	Only signal
ALT07	Threshold reached worked hours solar pump	Manuale	Immediate	Settable (Gfa01)	Only signal
ALT08	Threshold reached worked hours outside battery fan	Manual	Immediate	Settable (Gfa01)	Only signal
ALU01	Geothermal frosting protection exchanger	Manual (par. Gfc28)	Immediate	Yes	Stop the machine
ALU02	Frosting protection primary exchanger	Manual (par. Gfc32)	Immediate	Yes	Stop the machine
ALU03	Overheating exchanger	Manual	Immediate	Yes	Stop the machine
ALW01	Threshold reached high domestic water	Automatic	60 sec	Habilitable (Gfc01)	Only signal
ALW02	Threshold reached maximum domestic temperature at solar collector	Automatic	60 sec	Yes	Only signal
ALW03	Exceeded max. time to defrosting end	Automatic	Immediate	Yes	Only signal
ALD01	Alarm EEPROM	Manual	Immediate	Yes	Stop the machine
ALD02	Probe EVD EVO broken or disconnected	Automatic	Immediate	Yes	Stop the machine
ALD03	Engine error EEV	Manual	Immediate	Yes	Stop the machine
ALD04	Low overheating (LowSH)	Manual	Immediate	Yes	Stop the machine
ALD05	Low suction temperature	Manual	Immediate	Yes	Stop the machine
ALD06	Evaporation low temperature (LOP)	Manual	Immediate	Yes	Stop the machine
ALD07	High evaporation pressure (MOP)	Manual	Immediate	Yes	Stop the machine
ALD08	High condensation temperature (HiTcond)	Manual	Immediate	Yes	Stop the machine
ALD09	Driver offline	Automatic	Immediate	Yes	Stop the machine
ALL01	Device Power+ n. 1 Offline	Automatic	30 sec	Yes	Stop the machine
ALL02	Alarms Power+ n.1 0: No error 1: Overpower 2: Overp. engine 3: Overvoltage 4: Undervoltage 5: Overtemperature 6: Undertemperature 7: Overpower HW 8: Overtemp. engine 9: Reserved 10: Error Cpu 11: Param. default 12: Undulation DC bus 13: timeout com.ser. 14: Error thermistor 15: Error Autotuning 16: Drive disabled 17: Engine phase missing 18: Broken fan 19: Engine stalling	Manual	Immediate	Yes	Stop the machine

The letter preceding the number has the following meaning

A	"AIN" Physic probes broken uPC	P	"Pumps" Pumps flow switches, pumps thermic
B	"Boh" Alarms blocking the Circuit, High-Low pressure..	Q	"Quality" HACCP, Consumptions
C	"Compressor" Thermic, envelope	R	"Remote" Various alarms from digital inputs
D	"Driver" Electronic valve	S	"Serial probe" Serial probes
E	"Expansion" Alarms uPCe	T	"Timing" Warning maintenance
F	"Fan" fan	U	"unit" Alarms blocking the unit
G	"Generic" general alarm, Clock broken, HW, Memory	V	"VFD" Alarms inverter
H	"Humidifier" humidifier	W	"Warning" generic
I	"Fancoil" alarms coming from and hydronic net	X	Defrosting
M	"MP-BUS" / Belimo	Y	Climate
O	"Offline" Offline supervisor, offline pLAN		

16.1 Alarms resolution

Alarm code	Causes	Solution proposed
ALB01	Condensation high pressure, the most of times this alarm is caused by the too high set of the water produced both in heating than in DHW. Other very frequent causes are: the wrong positioning of regulation probes (B2 and B3) compared to the flow of the unit and the insufficient water flow to plate heat condensator.	1) place the probes B2 and/or B3 at the same height as the input flow accumulation of the machine.
ALB02	See ALB01	See ALB01
ALB03	The low pressure from transducer can be connected to dynamic inside the machine. But it can also be symptom of a malfunction of the transducer or a refrigerant loss.	If the alarm is frequent 2/3 consecutive times in 4-6 hours inspect the unit with a leak detector and contact the assistance.
ALC03	Alarm envelope, the compressor is out from its field of work. In this case the reasons can be several and not listable.	We suggest at first to consider the use of the unit that can be incoherent with the work field of the unit, for example, operation DHW with outside too high temperatures. See the section "operative zone allowed" of this manual.
ALC04	The compressor can't create a minimum pressure delta in a certain interval of time, the cause can be the inertia of the system and the nearness between the temperatures of air and water	If it occurs occasionally, it's just a no serious signal permitting to the unit to keep on working.
ALP03	Flow loss in the hydraulic system, caused by air in the system, solid particles or excessive flow loss	Vent the system of all the air, regular cleaning of the system. Avoid excessive pressure loss in the hydraulic circuit, in particular avoid restrictions in the system.
ALW03	Caused by air currents cooling the coil finned during the defrosting procedure	Study a different positioning of the machine or block the wind addressed to the unit.
ALD04	Alarm which depends on the dynamics inside the machine	Contact the assistance
ALD06	Alarm which depends on the dynamics inside the machine	Inspect the unit with leak detector and contact the assistance
ALD07	Alarm which depends on the dynamics inside the machine	Contact the assistance
ALL01	Missing communication between inverter and electronic board caused by slight power surges and current or by electromagnetic fields disturbing the network	Check the counter powering the machine, avoid to overload it, check the domestic line, avoid electromagnetic fields nearby
ALL02	Missing communication between inverter and electronic board caused by strong power surges and current or electromagnetic fields disturbing the network	Check the counter powering the machine, avoid to overload it, check the domestic line, avoid electromagnetic fields nearby. The contact the assistance.

16.2 Notifications

Notification	causes
Heat Transfer Limited	It occurs when the difference between the value of the B7 and B2 probes in the case of heating operation, or the difference between B7 and B3 probes in the case of DHW production, is excessive.
Power limit temperature	It is activated if the heat pump is producing water less than 6 ° or more than 58 °. The compressor is moves to a minimum speed to avoid generating an error.
Irregular waterflow	Since the heat pump was powered, at least once a problema of flow occurred. After five of these notificatios, the next one is a flow error.

17 Declaration of conformity



Dichiarazione di conformità UE EU Declaration of Conformity EU Konformitätserklärung

La sottoscritta
The undersigned
Die Firma

Templari Srl
Via Pitagora, 20/A – 35030 Rubano (PD) - Italy
P. IVA 04128520287

conferma che l'apparecchio qui di seguito indicato risponde alle seguenti direttive CE applicabili in materia. Ogni modifica dell'apparecchio rende la presente dichiarazione non valida.

hereby certifies that the following device complies with the applicable EU directives. This certification loses its validity if the device is modified.

erklärt in alleiniger Verantwortung, dass die nachfolgend erwähnte Produkte den angeführten EC – Normen entsprechen. Bei jeglicher Veränderung an den Geräten erlischt die Gültigkeit dieser Konformitätserklärung.

Denominazione: Pompe di calore
Designation: Heat Pump
Produkt: Wärmepumpe

Modello:
Type:
Typ:

Kita HR 10/HR 10 3Phase/HR 12 /HR 12 3Phase/HR 14/HR 14 3Phase/HR14 Cold 3Phase / S / S 3Phase / S plus / S plus 3Phase / Si / Si 3Phase / Si Cold / Si Cold 3Phase / Si Plus / Si Plus 3Phase / Si Plus Cold / Si Plus Cold 3Phase / Mi / Mi 3Phase / Mi Cold / Mi Cold 3Phase / Mi Plus / Mi Plus 3Phase / Mi Plus Cold / L33 / L42 / L66 / L Cold / Li Plus / Air / Air Cold / Air Cold + Booster / Air Plus

Direttive UE
EU Directives
EU-Anforderungen

Direttiva attrezzature a pressione (PED) 2014/68/UE (PED);
Direttiva Macchine (MD) 2006/42/CE;
Direttiva Bassa Tensione (LVD) 2014/35/UE;
Direttiva Compatibilità Elettromagnetica (EMC) 2014/30/UE.

Norme applicate
Applied standards
Angewandte Norm

EN 55014-1:2006 +A1:2009;
EN55014-2:1997+A1:2001+A2:2008;
EN 61000-3-2:2006+A1, A2:2009;
EN 61000-4-2:2008;
EN 61000-4-4:2008;
EN 61000-4-5:2008.

Procedura di valutazione della conformità PED
PED Conformity assessment procedure
PED Konformitätsbewertungsverfahren

Categoria I, Modulo A – Controllo interno della produzione
Category I, Module A – Technical documentation and internal production control
Kategorie I, Modul A – Interne Fertigungskontrolle

La presente dichiarazione è rilasciata sotto la responsabilità esclusiva del fabbricante.
This declaration of conformity is issued under the sole responsibility of the manufacturer.
Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller.

Firmato a nome e per conto del fabbricante
Signed in the name and on behalf of the manufacturer
Unterzeichnet für und im Namen des Herstellers

Rubano (PD), 26/05/2022

Ing. Gianluca Masiero

(Technical Director / *Direttore Tecnico*)



A series of horizontal dashed lines for writing, spanning the width of the page.

A series of horizontal dashed lines for writing, spanning the width of the page.

Templari srl

RUBANO
via Pitagora, 20A
35030 Rubano (PD)
Italy

ABANO TERME
via C. Battisti, 169
35031 Abano Terme (PD)
Italy

Tel. +39 049 8597400
info@templari.com

www.templari.com

